


# EZO-EC<sup>TM</sup>

## Embedded Conductivity Circuit

Reads	Conductivity = <b>μS/cm</b> Total dissolved solids = <b>ppm</b> Salinity = <b>PSU (ppt) 0.00 – 42.00</b> Specific gravity <i>(sea water only)</i> = <b>1.00 – 1.300</b>
Range	<b>0.07 – 500,000+ μS/cm</b>
Accuracy	<b>+/- 2%</b>
Response time	<b>1 reading per sec</b>
Supported probes	<b>K 0.1 – K 10 any brand</b>
Calibration	<b>1 or 2 point</b>
Temp compensation	<b>Yes</b>
Data protocol	<b>UART &amp; I<sup>2</sup>C</b>
Default I <sup>2</sup> C address	<b>100 (0x64)</b>
Operating voltage	<b>3.3V – 5V</b>
Data format	<b>ASCII</b>

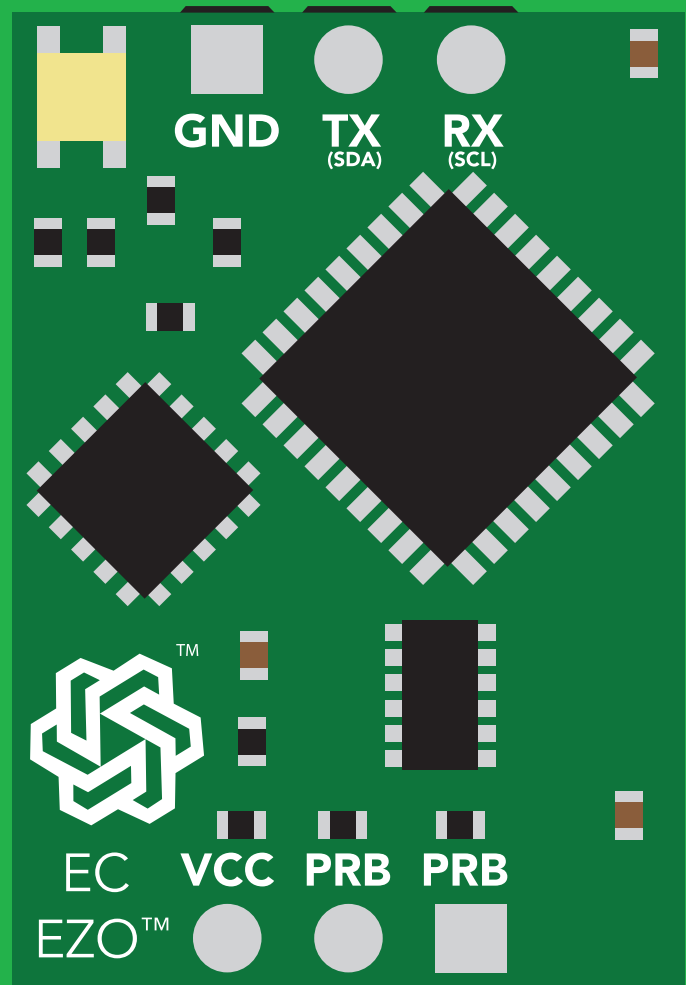

**PATENT PROTECTED**




# STOP

**SOLDERING THIS DEVICE VOIDS YOUR WARRANTY.**


**This is sensitive electronic equipment. Get this device working in a solderless breadboard first. Once this device has been soldered it is no longer covered by our warranty.**

**This device has been designed to be soldered and can be soldered at any time. Once that decision has been made, Atlas Scientific no longer assumes responsibility for the device's continued operation. The embedded systems engineer is now the responsible party.**

**Get this device working in a solderless breadboard first!**

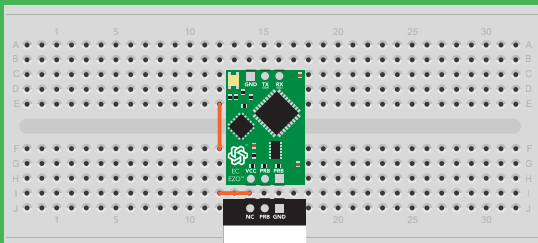

**Do not embed this device without testing it in a solderless breadboard!**

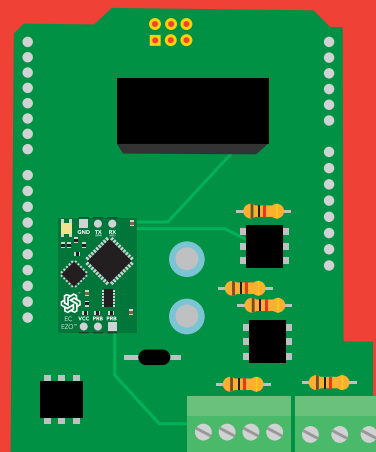

# Table of contents

Circuit dimensions	4	Output units	8
Power consumption	4	Power and data isolation	9
Absolute max ratings	4	Correct wiring	11
Conductivity probe range	5	Calibration theory	12
Resolution	6	Default state	17
Operating principle	7	Available data protocols	18

## UART


UART mode	20
Receiving data from device	21
Sending commands to device	22
LED color definition	23
<b>UART quick command page</b>	<b>24</b>
LED control	25
Find	26
Continuous reading mode	27
Single reading mode	28
Calibration	29
Export calibration	30
Import calibration	31
Setting the probe type	32
Temperature compensation	33
Enable/disable parameters	34
Naming device	35
Device information	36
Response codes	37
Reading device status	38
Sleep mode/low power	39
Change baud rate	40
Protocol lock	41
Factory reset	42
Change to I <sup>2</sup> C mode	43
Manual switching to I <sup>2</sup> C	44

## I<sup>2</sup>C

I <sup>2</sup> C mode	46
Sending commands	47
Requesting data	48
Response codes	49
LED color definition	50
<b>I<sup>2</sup>C quick command page</b>	<b>51</b>
LED control	52
Find	53
Taking reading	54
Calibration	55
Export calibration	56
Import calibration	57
Setting the probe type	58
Temperature compensation	59
Enable/disable parameters	60
Device information	61
Reading device status	62
Sleep mode/low power	63
Protocol lock	64
I <sup>2</sup> C address change	65
Factory reset	66
Change to UART mode	67
Manual switching to UART	68

Circuit footprint	69
Datasheet change log	70
Warravvnty	73

# EZO™ circuit dimensions

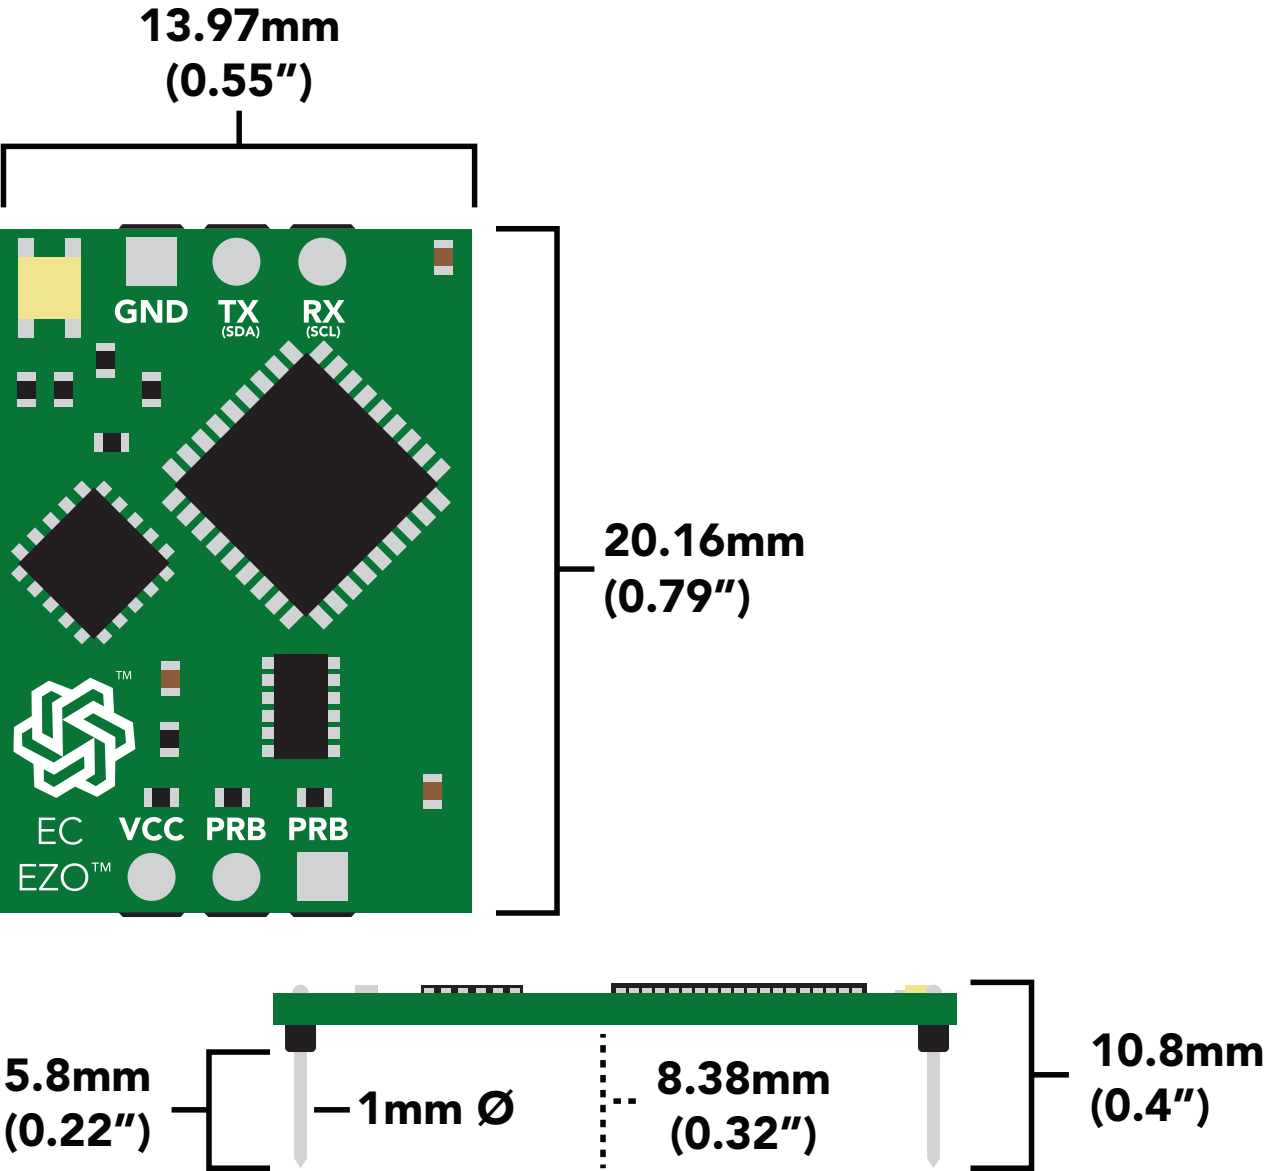

## Power consumption

	LED	MAX	STANDBY	SLEEP
5V	ON	50 mA	18.14 mA	0.7 mA
	OFF	45 mA	15.64 mA	
3.3V	ON	35 mA	16.85 mA	0.4 mA
	OFF	34 mA	15.85 mA	

## Absolute max ratings

Parameter	MIN	TYP	MAX
Storage temperature (EZO™ Conductivity)	-60 °C		150 °C
Operational temperature (EZO™ Conductivity)	-40 °C	25 °C	125 °C
VCC	3.3V	5V	5.5V



# Conductivity probe range

The EZO™ Conductivity circuit is capable of connecting to any two-conductor conductivity probe, ranging from:

**K 0.01**



**K 10**

Atlas Scientific™ has tested three different K value probe types:

**K 0.1**



**accurate reading range**

**0.07 $\mu$ S/cm – 50,000 $\mu$ S/cm**

TDS (ppm) 0 – 25,000

Salinity (ppt) 0 – 33

**K 1.0**



**accurate reading range**

**5 $\mu$ S/cm – 200,000+ $\mu$ S/cm**

TDS (ppm) 2 – 100,000

Salinity (ppt) 0 – 42\*

*\*salinity scale cannot go any higher*

**K 10**



**accurate reading range**

**10 $\mu$ S/cm – 1S/cm**

TDS (ppm) 5 – 500,000

Salinity (ppt) 0 – 42\*

*\*salinity scale cannot go any higher*

Atlas Scientific™ does not know what the accurate reading range would be for conductivity probes, other than the above mentioned values. Determining the accurate reading range of such probes, i.e. **K 2.6**, or **K 0.66**, is the responsibility of the embedded systems engineer.

# Resolution

The EZO™ Conductivity circuit, employs a method of scaling resolution. As the conductivity increases the resolution between readings decreases.

The EZO™ Conductivity circuit will output conductivity readings where the first **4 digits** are valid and the others are set to 0. This excludes conductivity readings that are less than 9.99. In that case, only 3 conductivity digits will be output.

0.07 – 99.99

Resolution = **0.01µS/cm**

100.1 – 999.9

Resolution = **0.1µS/cm**

1,000 – 9,999


Resolution = **1.0µS/cm**

10,000 – 99,990

Resolution = **10µS/cm**

100,000 – 999,900



Resolution = **100µS/cm**

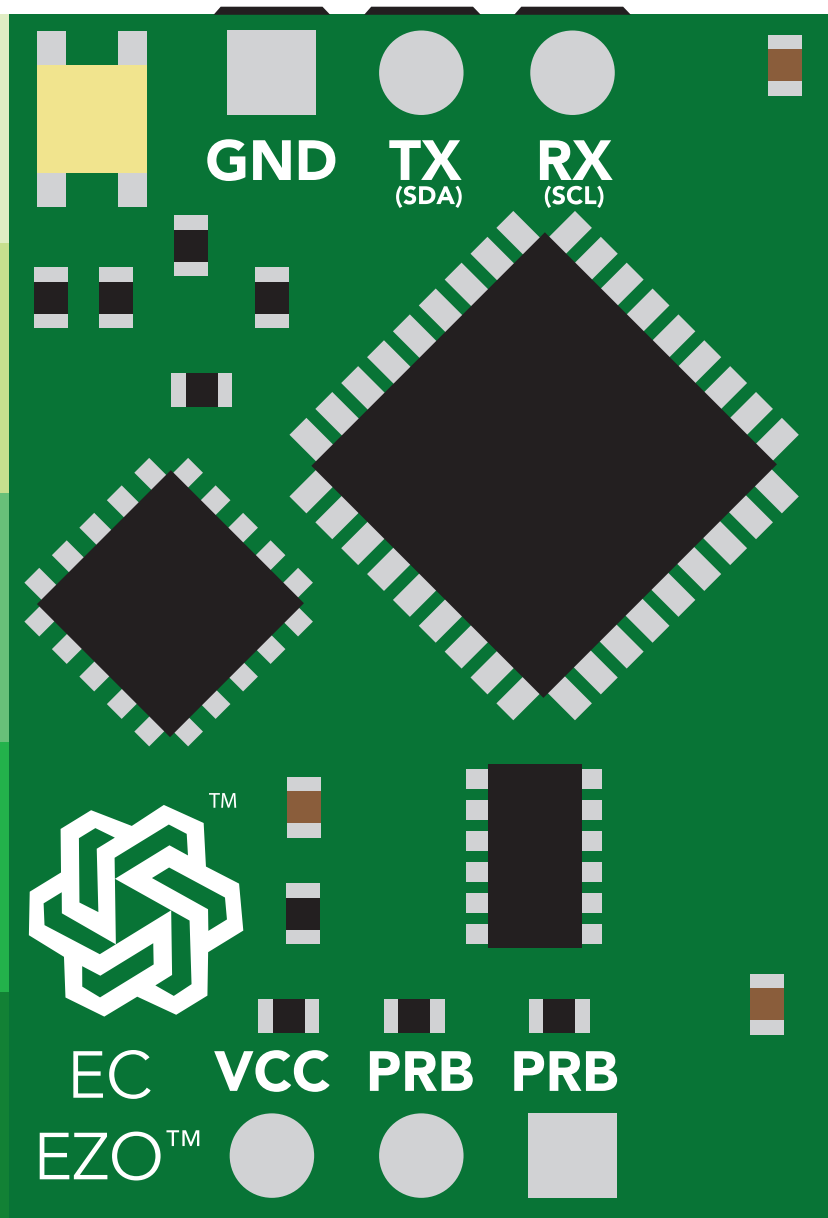


# Operating principle

An E.C. (**electrical conductivity**) probe measures the electrical conductivity in a solution. It is commonly used in hydroponics, aquaculture and freshwater systems to monitor the amount of nutrients, salts or impurities in the water.


Inside the conductivity probe, two electrodes are positioned opposite from each other, an AC voltage is applied to the electrodes causing cations to move to the negatively charged electrode, while the anions move to the positively charged electrode. The more free electrolyte the liquid contains, the higher the electrical conductivity.

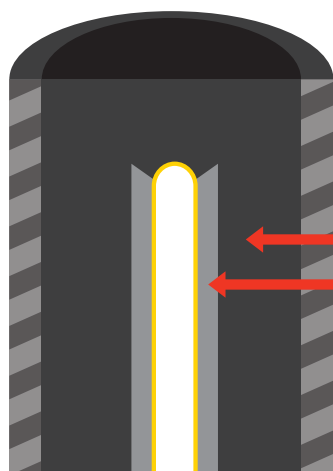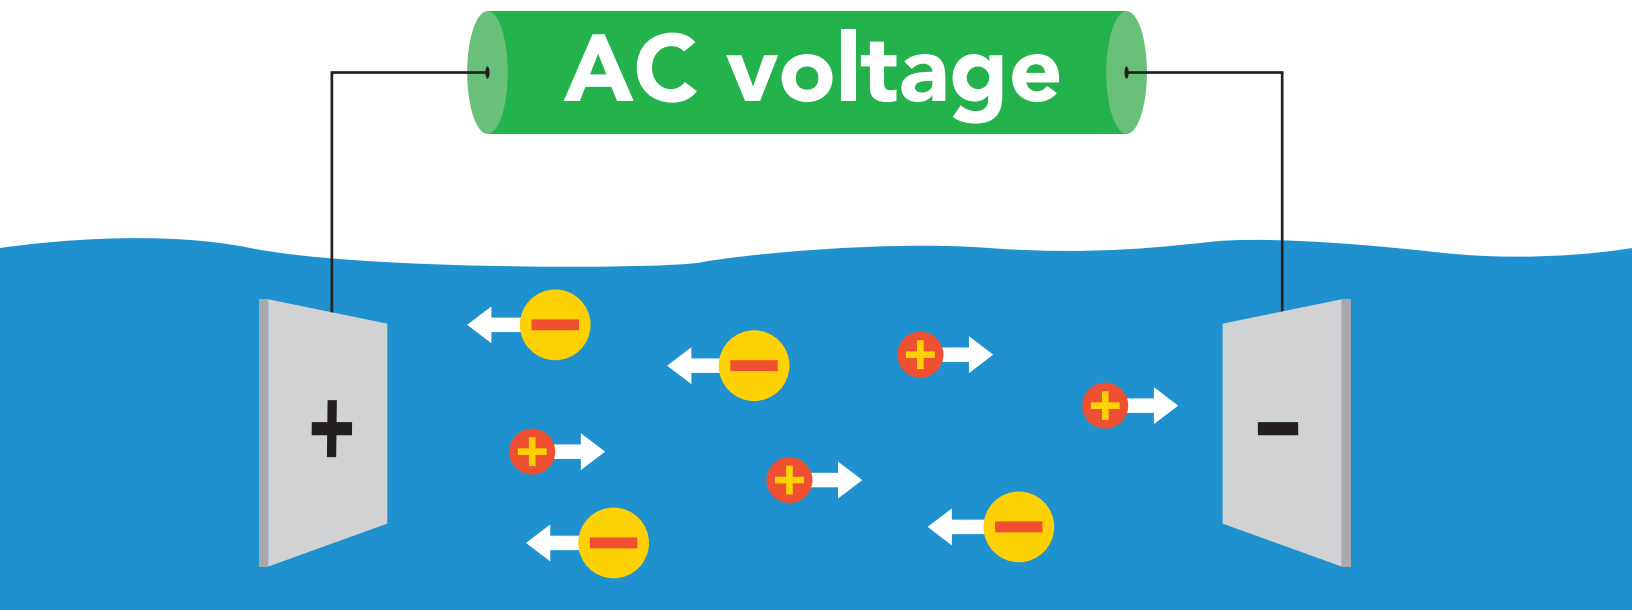

**K 0.1**  
Graphite electrode

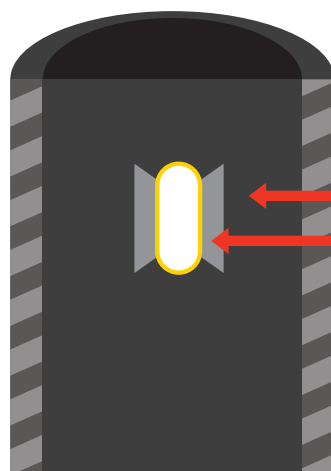

**K 1.0**  
Graphite electrode

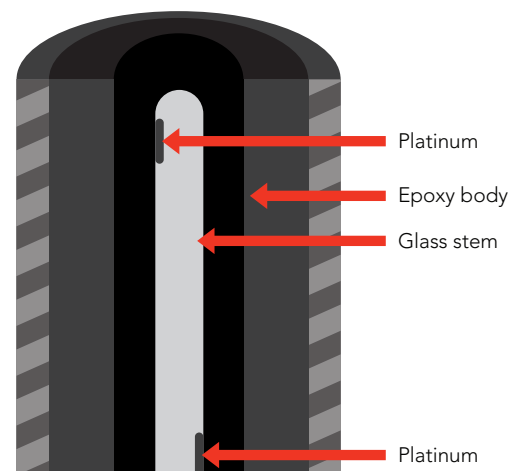

**K 10**  
Platinum electrode

# Output units

By default, EZO™ Conductivity circuits with firmware version 2.10 and above will **only** output EC. To enable these parameters see page **34** for UART, and **60** for I²C.

The EZO™ Conductivity circuit also has the capability to read:

**Conductivity =  $\mu\text{S}/\text{cm}$**

**Total dissolved solids = ppm**

**Salinity = PSU (ppt) 0.00 – 42.00**

**Specific gravity (sea water only) = 1.00 – 1.300**

These parameters must be individually enabled within the device. See page **34** to enable each parameter in UART mode, and on page **60** for I²C mode.


Once these parameters have been enabled, output will be a CSV string.

## Example

EC,TDS,SAL,SG

## Default LED blink pattern


This is the LED pattern for Continuous Mode (*default state*)  
This can only happen when the device is in **UART** mode.

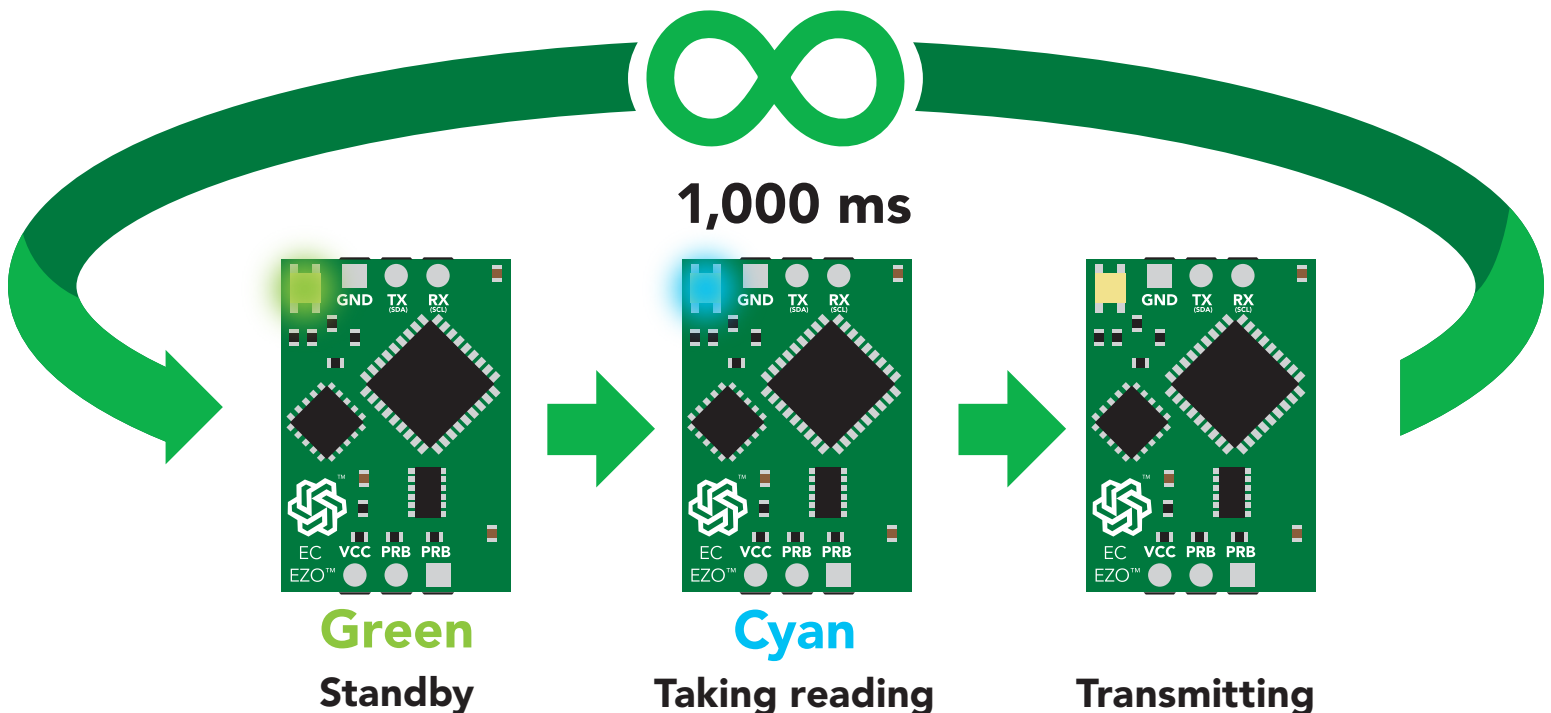


# Power and data isolation

The Atlas Scientific EZO™ Conductivity circuit is a very sensitive device. This sensitivity is what gives the Conductivity circuit its accuracy. This also means that the Conductivity circuit is capable of reading micro-voltages that are bleeding into the water from unnatural sources such as pumps, solenoid valves or other probes/sensors.


When electrical noise is interfering with the Conductivity readings it is common to see rapidly fluctuating readings or readings that are consistently off. To verify that electrical noise is causing inaccurate readings, place the Conductivity probe in a cup of water by itself. The readings should stabilize quickly, confirming that electrical noise was the issue.

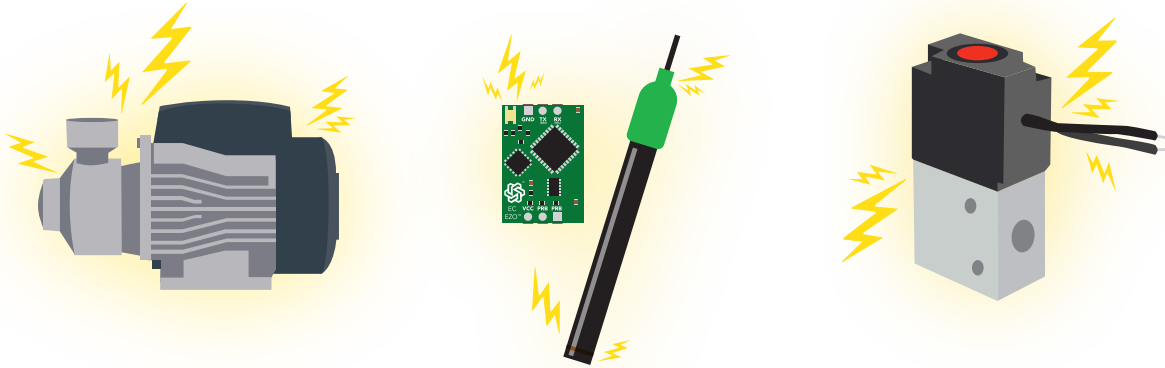

When reading from two EZO™ Conductivity circuits, it is **strongly recommended** that they are electrically isolated from each other.

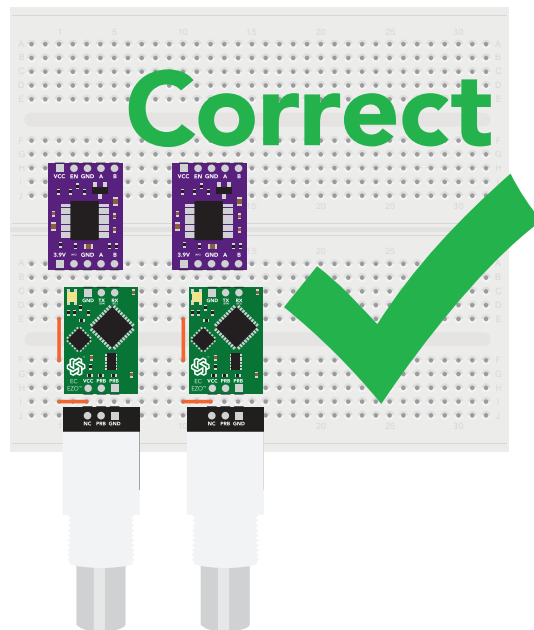

Basic EZO™  
Inline Voltage Isolator

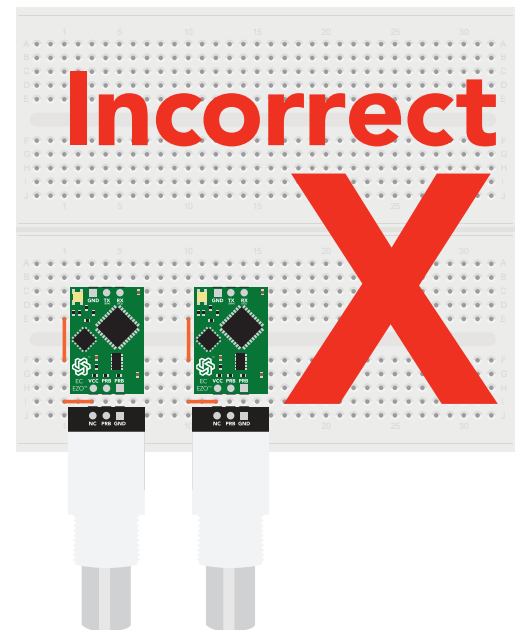


**Without isolation, Conductivity readings will effect each other.**

This schematic shows exactly how we isolate data and power using the [ADM3260](#) and a few passive components. The ADM3260 can output isolated power up to 150 mW and incorporates two bidirectional data channels.

This technology works by using tiny transformers to induce the voltage across an air gap. PCB layout requires special attention for EMI/EMC and RF Control, having proper ground planes and keeping the capacitors as close to the chip as possible are crucial for proper performance. The two data channels have a 4.7k $\Omega$  pull up resistor on both the isolated and non-isolated lines (R1, R2, R3, and R4) The output voltage is set using a voltage divider (R5, R6, and R7) this produces a voltage of 3.9V regardless of your input voltage.


**Isolated ground is different from non-isolated ground, these two lines should not be connected together.**

**VCC = 3.0v – 5.5v**

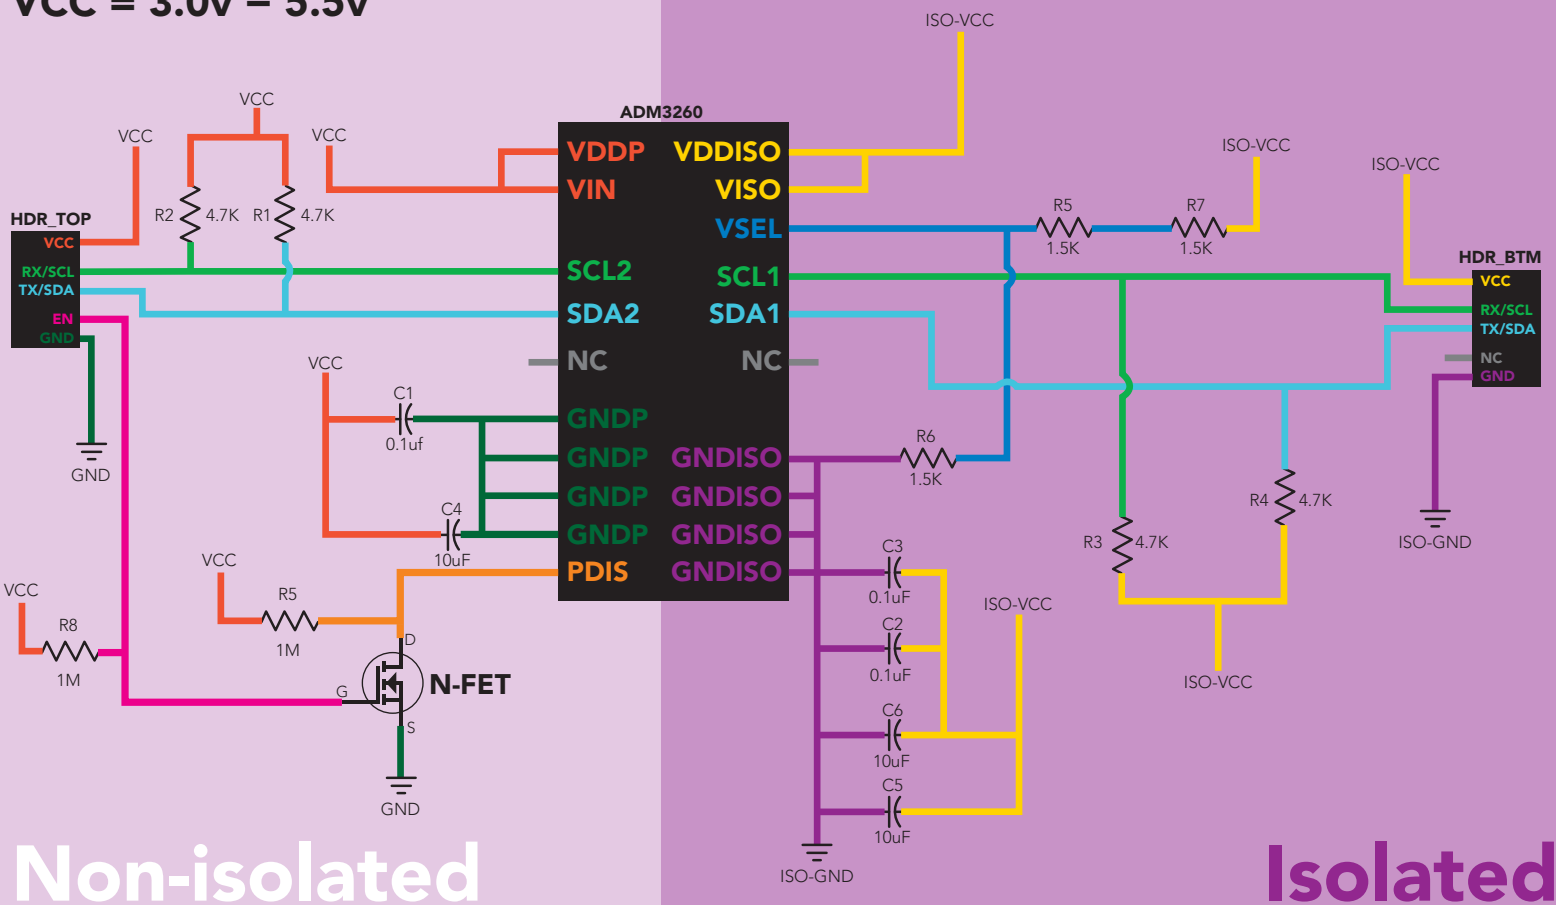


# ✓ Correct wiring


Bread board

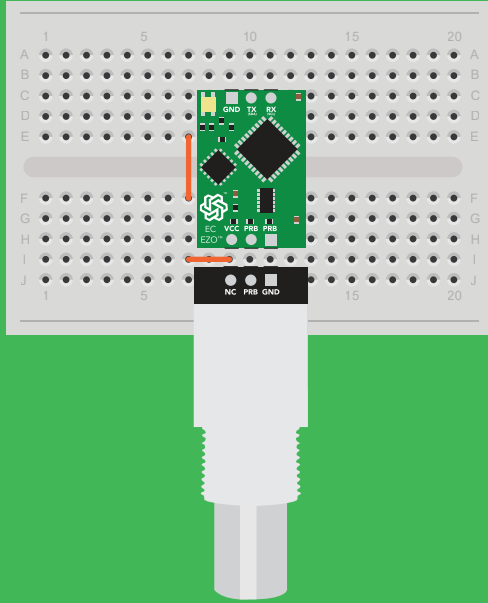


Bread board  
via USB

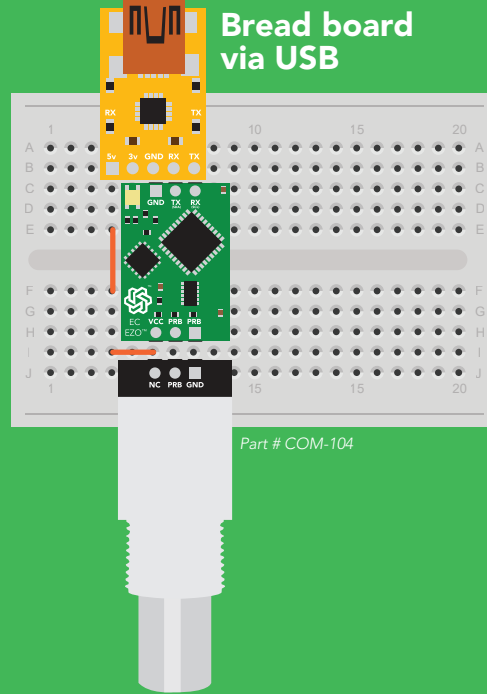

Carrier board

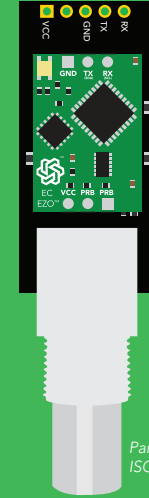

USB  
carrier board

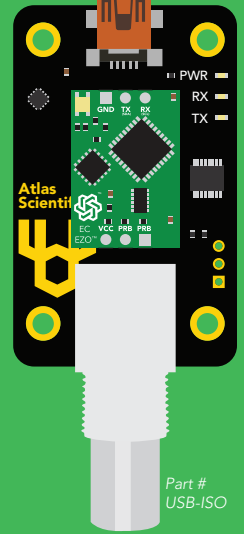


# X Incorrect wiring


Extended leads




Sloppy setup

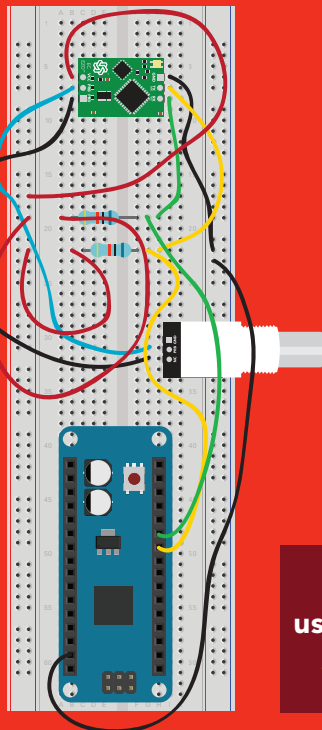

Perfboards or Protoboards

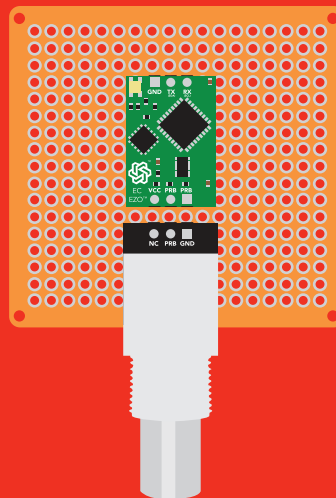

\*Embedded into your device

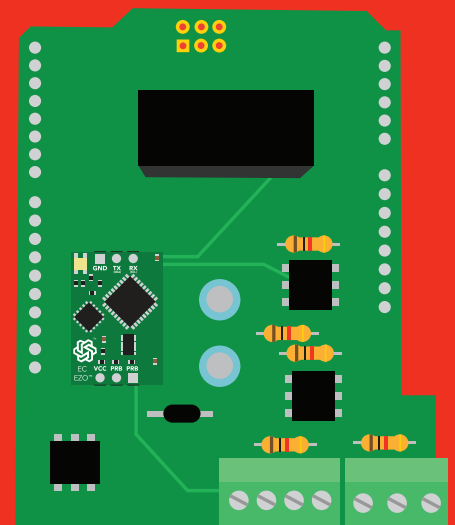

**NEVER**  
use Perfboards or Protoboards  
*Flux residue and shorting wires make it very hard to get accurate readings.*

**\*Only after you are familiar  
with EZO™ circuits operation**

# Calibration theory

Simple calibration


## UART mode

Continuous readings

Advanced calibration

## I<sup>2</sup>C mode

Continuously request readings

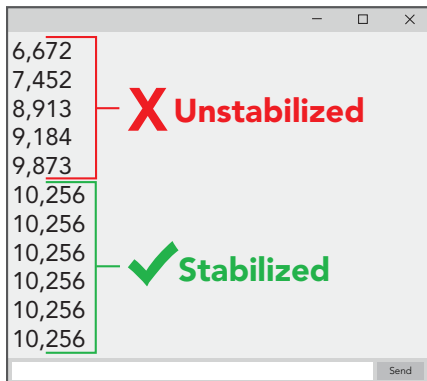


The most important part of calibration is watching the readings during the calibration process.

It's easiest to calibrate the device in its default state (UART mode, with continuous readings enabled).


Switching the device to I<sup>2</sup>C mode after calibration **will not** affect the stored calibration. If the device must be calibrated in I<sup>2</sup>C mode be sure to **continuously request readings** so you can see the output from the probe.

## 1. Pre-calibration setup

Connect the dry conductivity probe and take continuous readings.

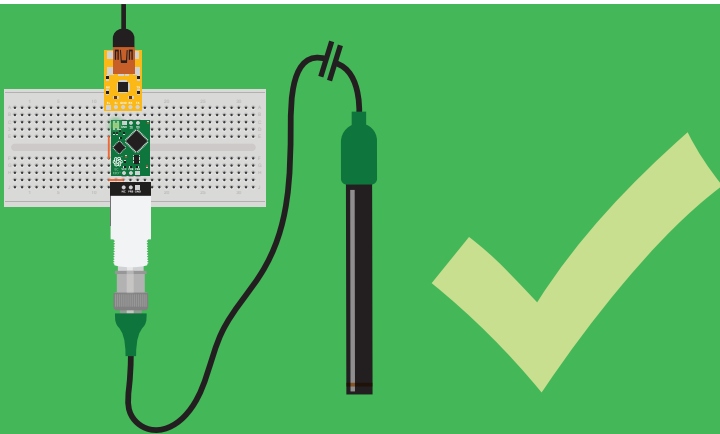

A simple hardware configuration with dry probe.

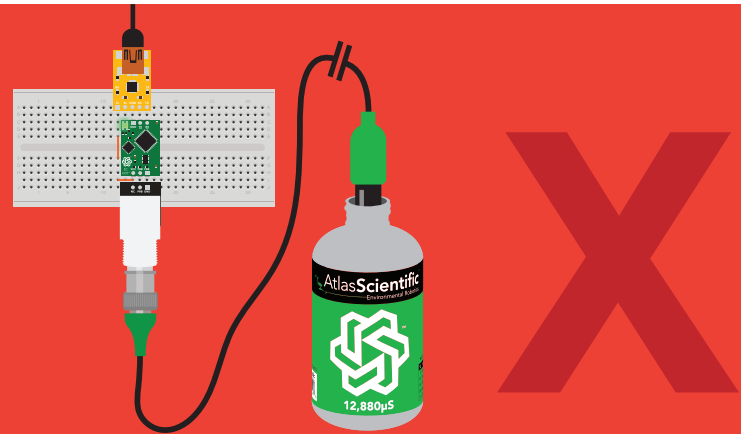

Not yet! Do not put the probe into calibration solution.

## 2. Set probe type

If your probe  $\neq$  K 1.0 (*default*), then set the probe type by using the "**K,n**" command. (where  $n$  = K value of your probe) for more information, see page [32](#) or [58](#).



### 3. Dry calibration

Perform a dry calibration using the command **"Cal,dry"** Even though you may see reading of 0.00 before issuing the **"Cal,dry"** command, it is still a necessary part of calibration.

00.00 → **"Cal,dry"** → 0.00 ✓ **Correct**

17.00 → **"Cal,dry"** → 0.00 ✓ **Also correct**

### 4. Single point or Two point calibration

No calibration



Single point calibration



Narrow range of accuracy

Two point calibration



Low point

High point

Wide range of accuracy


### Recommended calibration points




When calibrating, Atlas Scientific recommends using the above  $\mu\text{S}$  values. However, you can use any  $\mu\text{S}$  values you want.

## Two point calibration - low point


Pour a small amount of the low point calibration solution into a cup. Shake the probe to make sure you do not have trapped air bubbles in the sensing area. You should see readings that are off by **1 – 40%** from the stated value of the calibration solution. Wait for readings to stabilize (*small movement from one reading to the next is normal*).

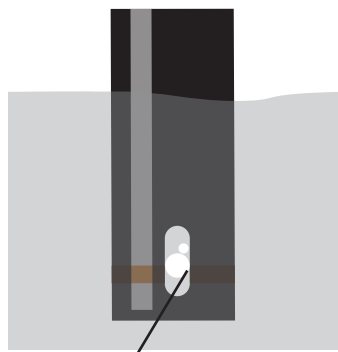


Trapped air in sensing area (shake to remove)

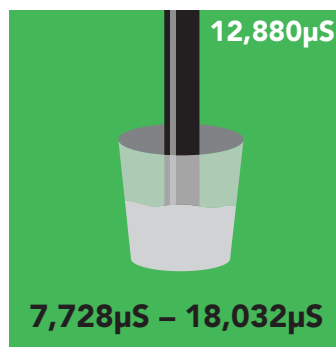

+/- 40%

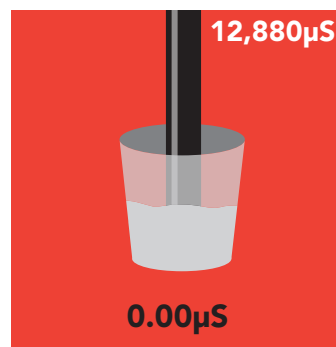


check probe connection,  
you cannot calibrate to 0.

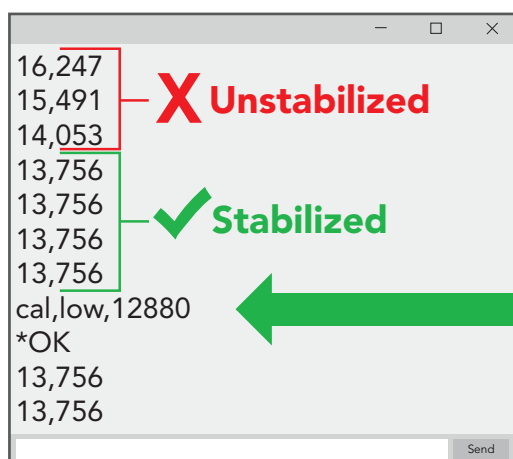

Once the readings stabilize, issue the low point calibration command. "**cal,low,12880**"  
(Readings will **NOT** change)

## Two point calibration - high point


- Rinse off the probe before calibrating to the high point.
- Pour a small amount of the high point calibration solution into a cup.
- Shake the probe to remove trapped air.
- Readings may be off by +/- 40%
- Wait for readings to stabilize.

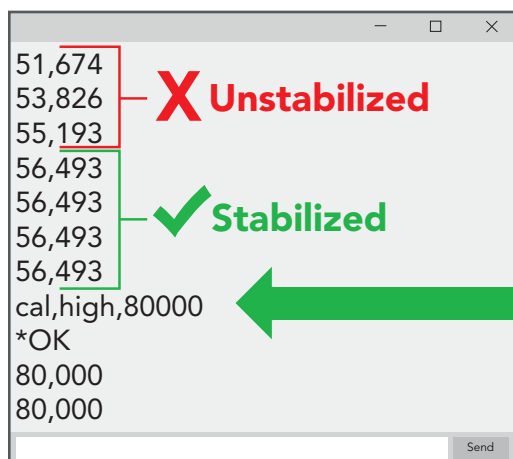

Once the readings stabilize, issue the high point calibration command. "**cal,high,80000**"  
(Readings **will** change, calibration complete).

## Single point calibration

- Pour a small amount of calibration solution into a cup ( $\mu\text{S}$  value of your choice).
- Shake the probe to remove trapped air.
- Readings may be off by +/- 40%
- Wait for readings to stabilize.

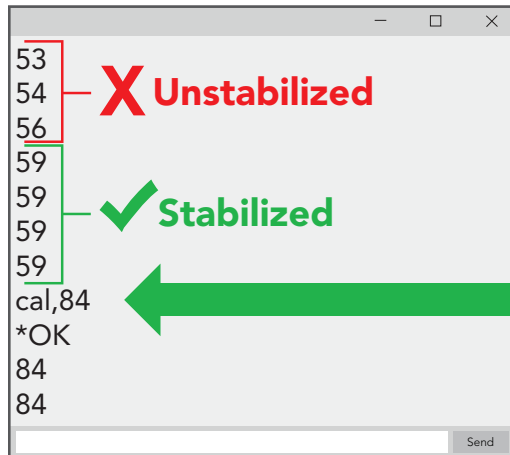


Once the readings stabilize, issue the single point calibration command. "**cal,n**" where n = any value. (Readings **will** change, calibration complete).

## Temperature compensation during calibration


Temperature has a significant effect on conductivity readings. The EZO™ Conductivity circuit has its temperature compensation set to 25° C as the default. **At no point should you change the default temperature compensation during calibration.**

If the solution is +/- 5° C (or more), refer to the chart on the bottle, and calibrate to that value.

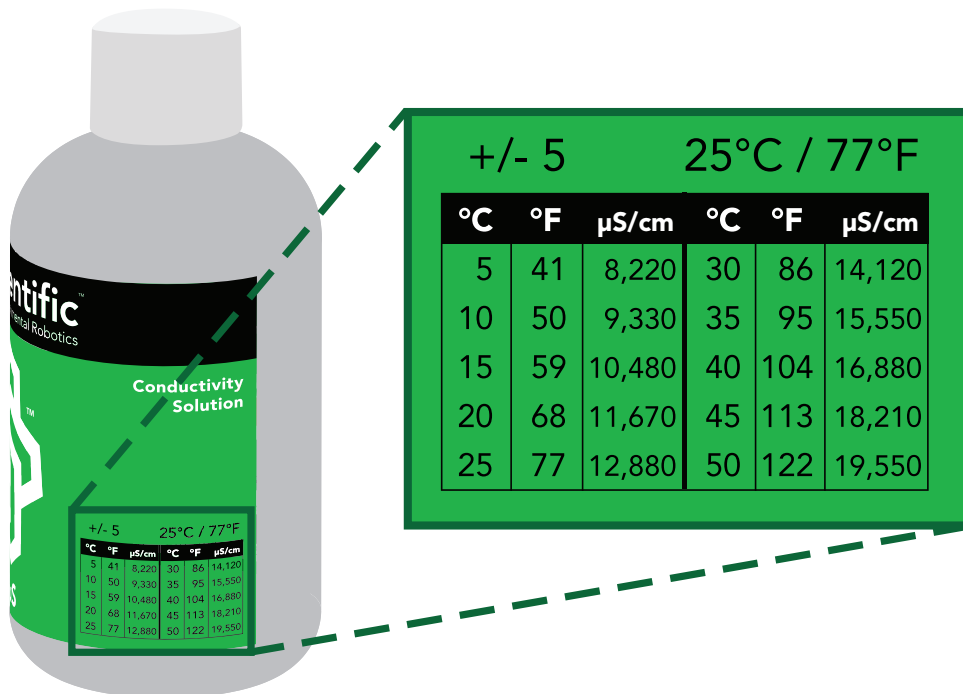


# Temperature compensation example

For this example, we brought the temperature of the solution down to 10° C.  
Referring to chart on the bottle, you can see the value you should calibrate to is **9,330µS**.

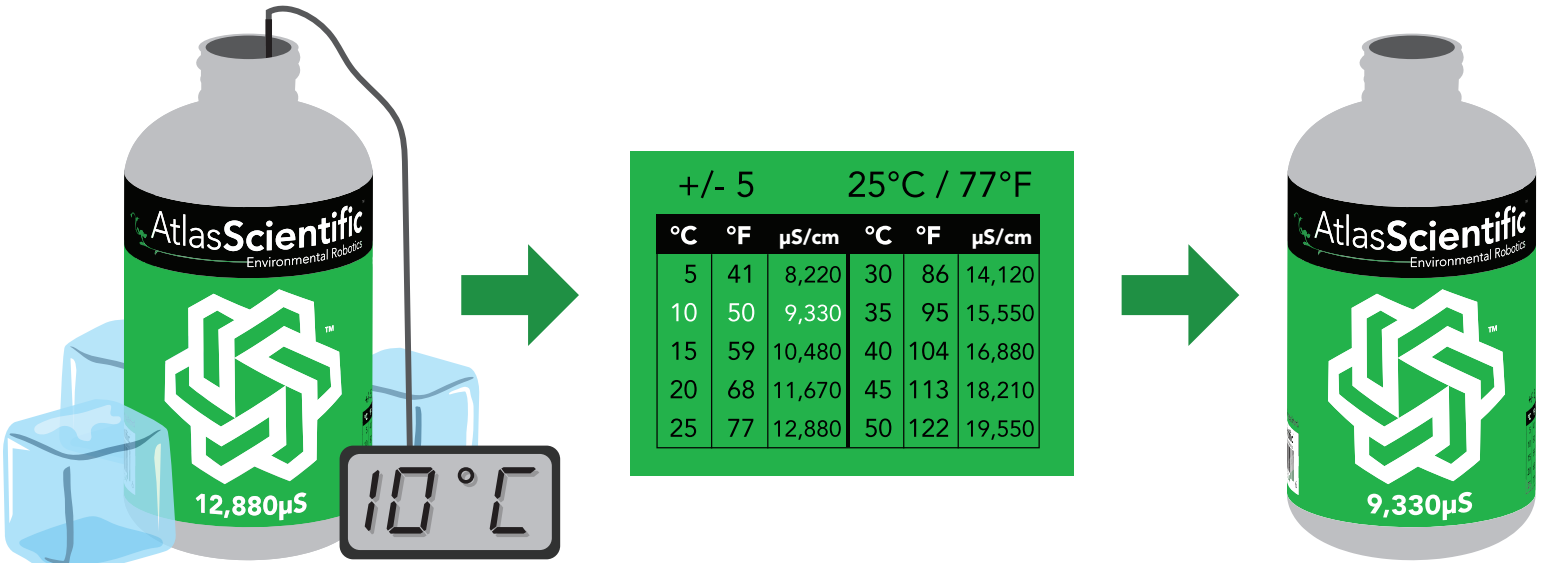

Over time, the readings will normalize as the solution warms to 25° C.

See pages 33 or 59 for more information.

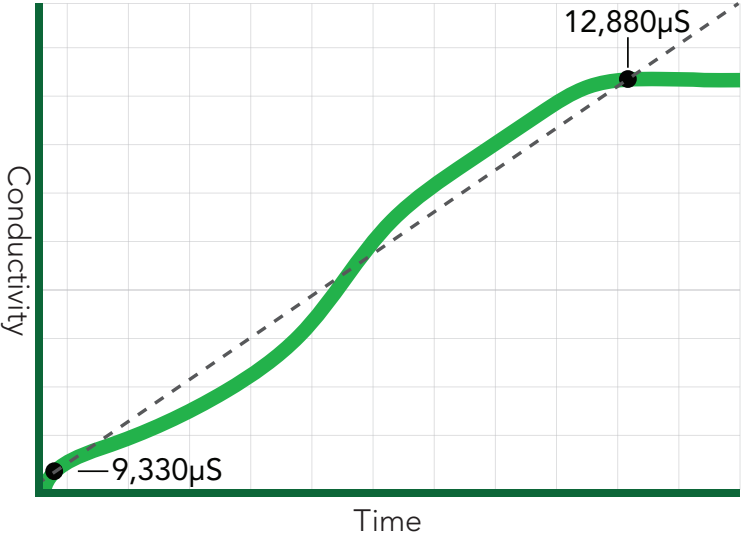

Default state

# UART mode

Baud

9,600

Readings

continuous

Units


$\mu\text{S}/\text{cm}$

Speed

1 reading per second

LED

on

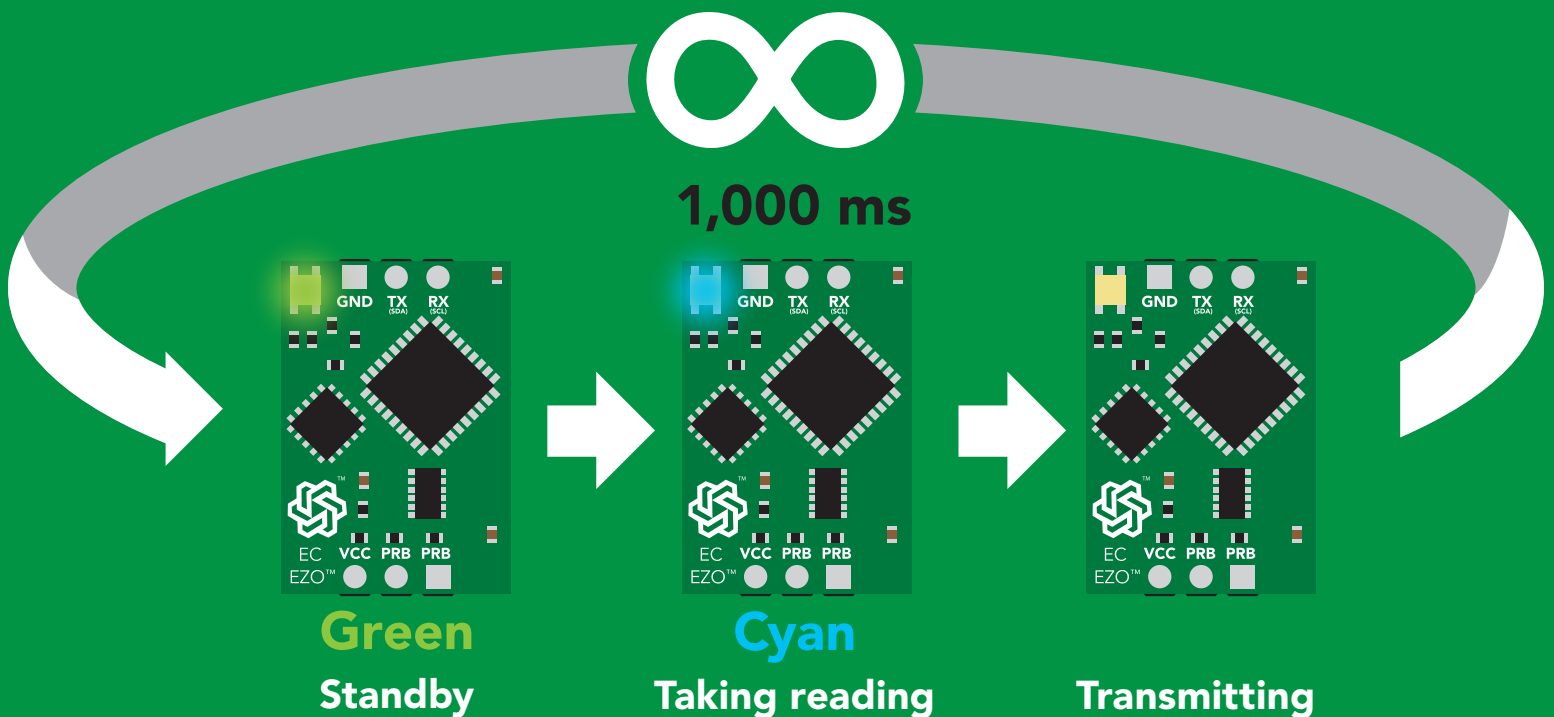

# ✓ Available data protocols

## UART

Default

## I<sup>2</sup>C

# ✗ Unavailable data protocols

## SPI

## Analog

## RS-485

## Mod Bus

## 4–20mA

# UART mode

## Settings that are retained if power is cut

- Baud rate
- Calibration
- Continuous mode
- Device name
- Enable/disable parameters
- Enable/disable response codes
- Hardware switch to I<sup>2</sup>C mode
- LED control
- Protocol lock
- Software switch to I<sup>2</sup>C mode

## Settings that are **NOT** retained if power is cut

- Find
- Sleep mode
- Temperature compensation

# UART mode

8 data bits      no parity  
1 stop bit      no flow control

**Baud** 300  
1,200  
2,400  
**9,600 default**  
19,200  
38,400  
57,600  
115,200

**RX**  
Data in




**TX**  
Data out



**Vcc** 3.3V – 5.5V

0V  VCC  
0V

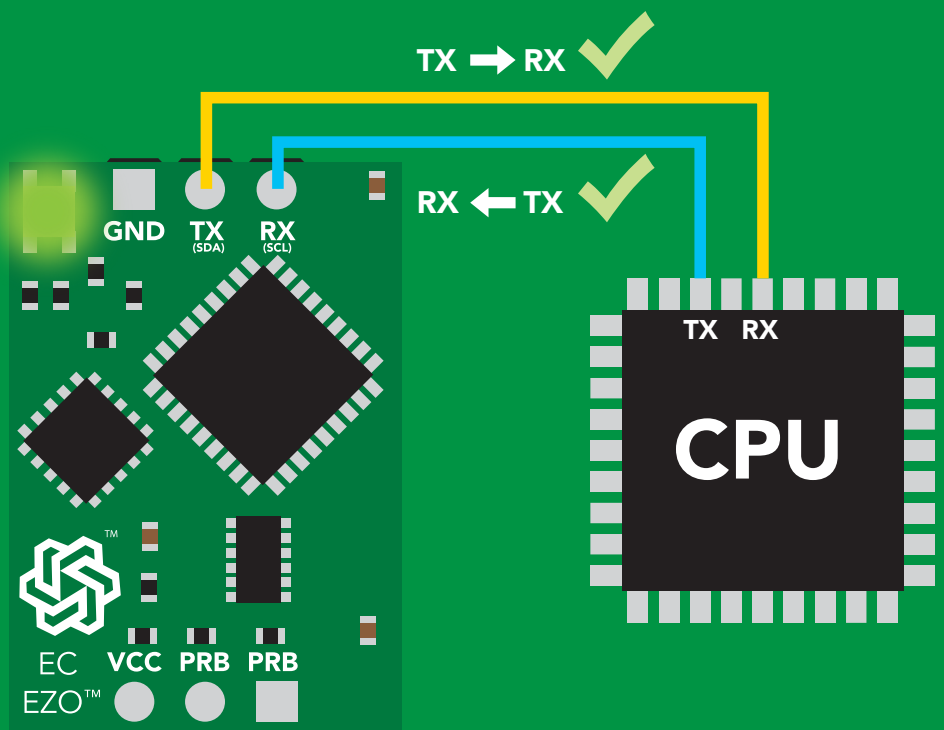

## Data format

### Reading

Conductivity =  $\mu\text{S}/\text{cm}$   
Total dissolved solids = ppm  
Salinity = PSU (ppt) 0.00 – 42.00  
Specific gravity (sea water only) = 1.00 – 1.300

**Units** EC, TDS, SAL, SG

**Encoding** ASCII

**Format** string

**Terminator**

**Data type**

**Decimal places** 3

**Smallest string** 3 characters

**Largest string** 40 characters

**carriage return**

**floating point**

3

3 characters

40 characters



# Receiving data from device


2 parts

ASCII data string

Command

Carriage return <cr>

Terminator

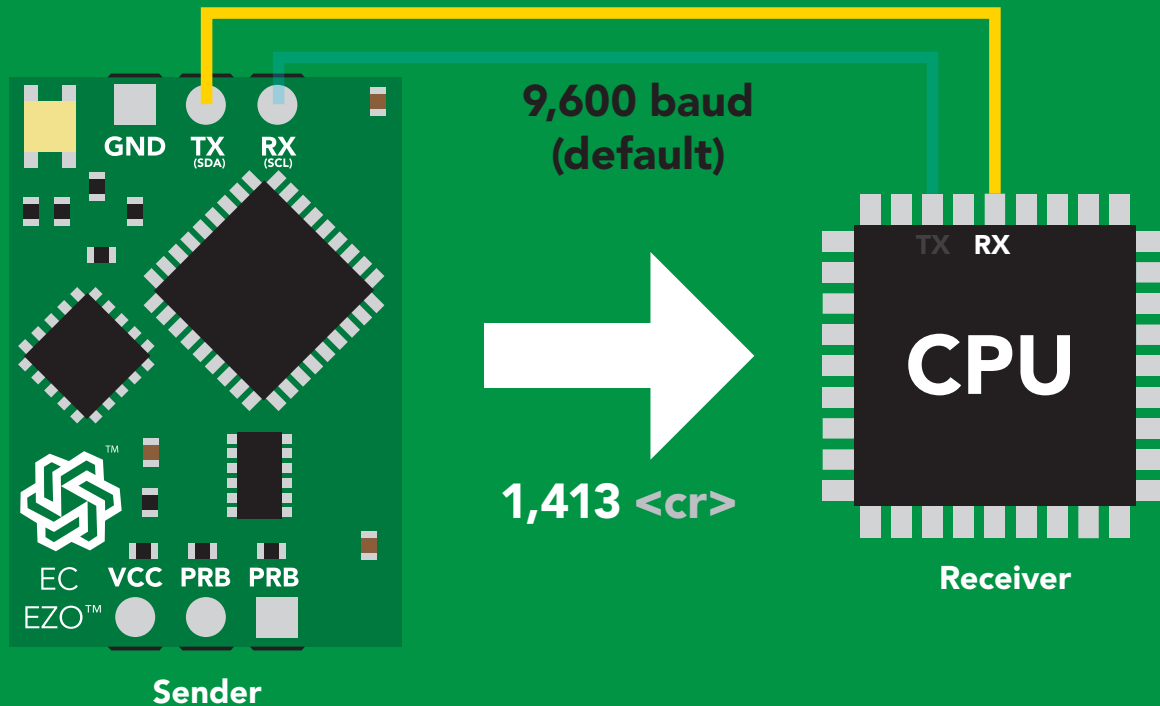

## Advanced

ASCII: 1 , 4 1 3 <cr>

Hex: 31 2C 34 31 33 0D

Dec: 49 44 52 49 51 13

# Sending commands to device


2 parts

**Command (not case sensitive)**

ASCII data string

**Carriage return <cr>**


Terminator

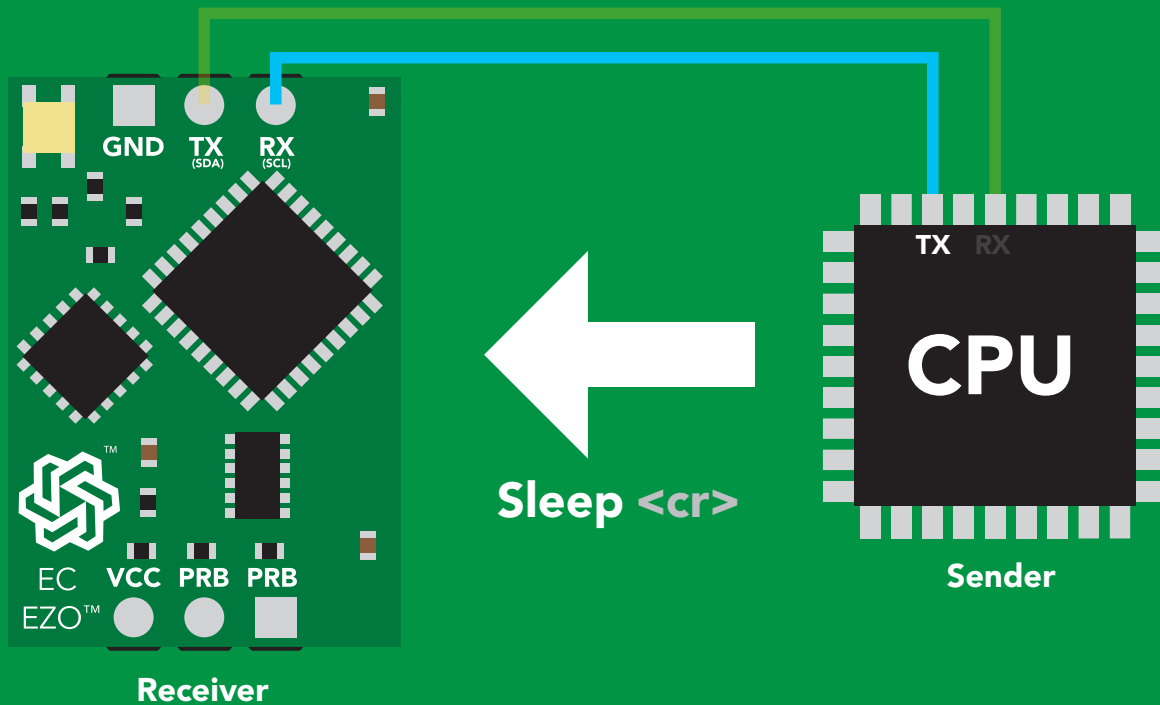


## Advanced

ASCII:	S	I	e	e	p	<cr>
Hex:	53	6C	65	65	70	0D
Dec:	83	108	101	101	112	13


# LED color definition

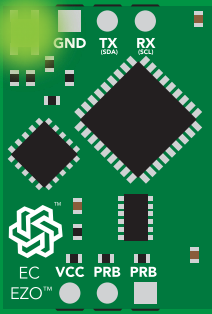


**Green**  
UART standby

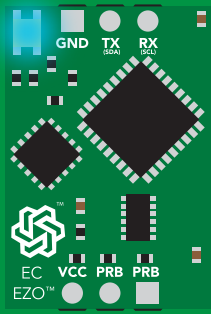


**Cyan**  
Taking reading

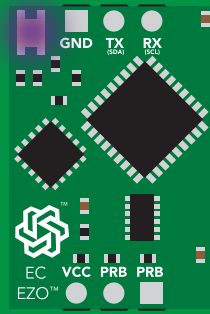

**Purple**  
Changing baud rate

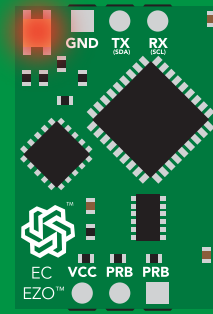

**Red**  
Command not understood

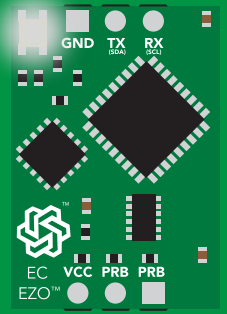

**White**  
Find

**5V**

LED ON  
**+2.5 mA**

**3.3V**

**+1 mA**

# UART mode

## command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function		Default state
Baud	change baud rate	pg. 40	9,600
C	enable/disable continuous reading	pg. 27	enabled
Cal	performs calibration	pg. 29	n/a
Export	export calibration	pg. 30	n/a
Factory	enable factory reset	pg. 42	n/a
Find	finds device with blinking white LED	pg. 26	n/a
i	device information	pg. 36	n/a
I2C	change to I <sup>2</sup> C mode	pg. 43	not set
Import	import calibration	pg. 31	n/a
K	Set probe type	pg. 32	K 1.0
L	enable/disable LED	pg. 25	enabled
Name	set/show name of device	pg. 35	not set
O	enable/disable parameters	pg. 34	all enabled
Plock	enable/disable protocol lock	pg. 41	disabled
R	returns a single reading	pg. 28	n/a
Sleep	enter sleep mode/low power	pg. 39	n/a
Status	retrieve status information	pg. 38	enable
T	temperature compensation	pg. 33	25°C
*OK	enable/disable response codes	pg. 37	enable

# LED control

## Command syntax

L,1 <cr> LED on **default**

L,0 <cr> LED off

L,? <cr> LED state on/off?

## Example

## Response

L,1 <cr>


\*OK <cr>

L,0 <cr>


\*OK <cr>

L,? <cr>

?L,1 <cr> or ?L,0 <cr>  
\*OK <cr>

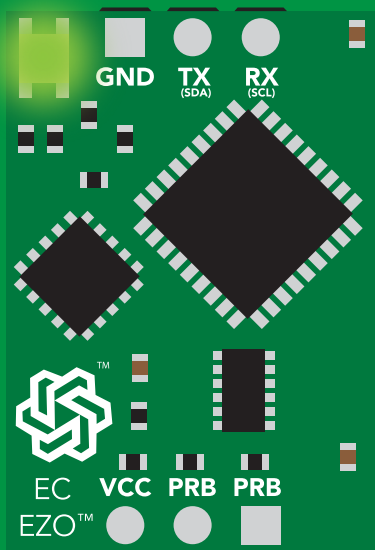

L,1

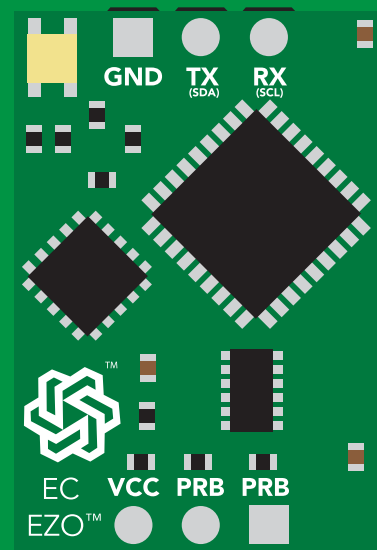

L,0

# Find

## Command syntax

This command will disable continuous mode  
Send any character or command to terminate find.


**Find** <cr> LED rapidly blinks white, used to help find device

## Example

**Find** <cr>

## Response

**\*OK** <cr>

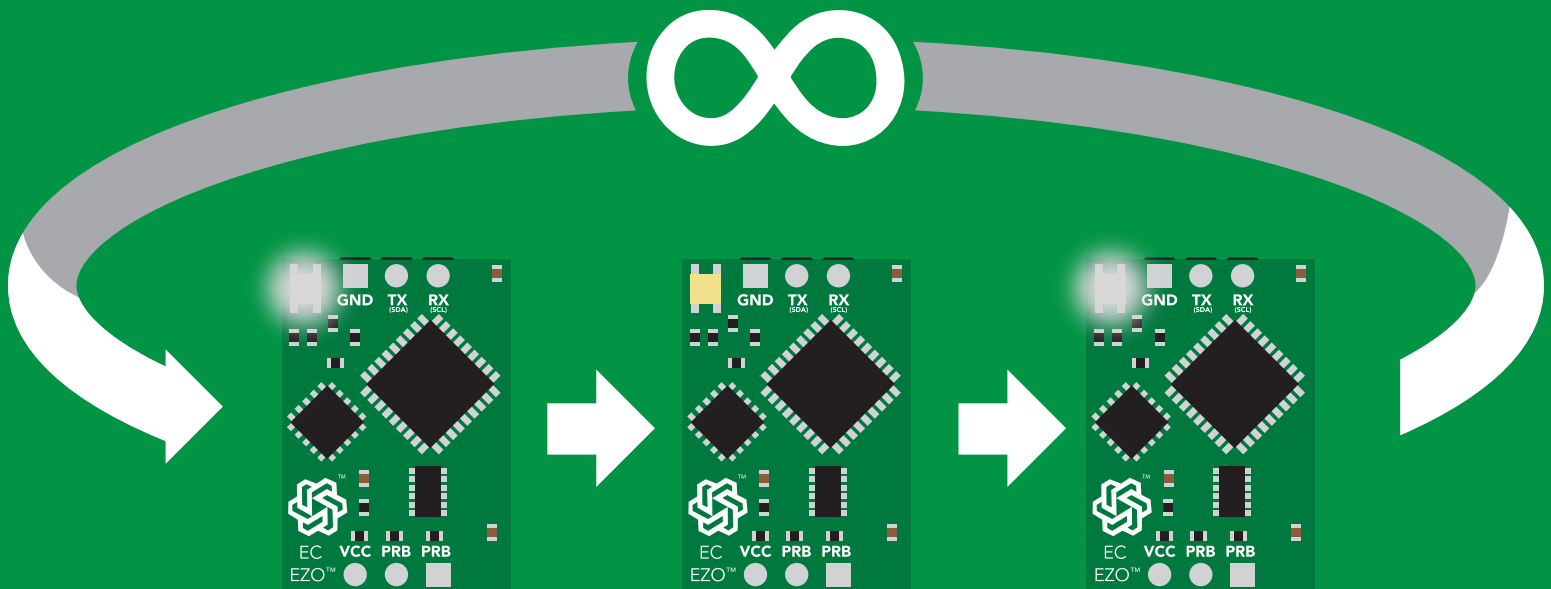

# Continuous reading mode

## Command syntax

- C,1 <cr>** enable continuous readings once per second **default**
- C,n <cr>** continuous readings every n seconds (n = 2 to 99 sec)
- C,0 <cr>** disable continuous readings
- C,? <cr>** continuous reading mode on/off?

### Example

### Response

**C,1 <cr>**

**\*OK <cr>**  
**EC,TDS,SAL,SG (1 sec) <cr>**  
**EC,TDS,SAL,SG (2 sec) <cr>**  
**EC,TDS,SAL,SG (3 sec) <cr>**

**C,30 <cr>**

**\*OK <cr>**  
**EC,TDS,SAL,SG (30 sec) <cr>**  
**EC,TDS,SAL,SG (60 sec) <cr>**  
**EC,TDS,SAL,SG (90 sec) <cr>**

**C,0 <cr>**

**\*OK <cr>**

**C,? <cr>**

**?C,1 <cr> or ?C,0 <cr> or ?C,30 <cr>**  
**\*OK <cr>**

# Single reading mode

## Command syntax


R <cr> takes single reading

### Example

R <cr>


### Response

1,413 <cr>  
\*OK <cr>

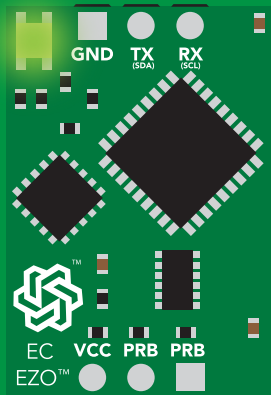


Green

Standby

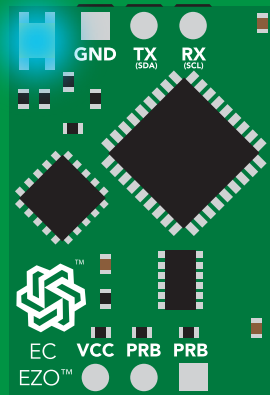

Cyan

Taking reading

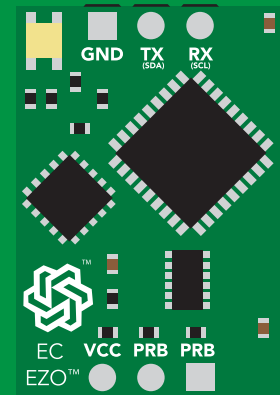

Transmitting



600 ms



# Calibration

## Command syntax

Dry calibration must always be done first!

Cal,dry	<cr>	dry calibration
Cal,n	<cr>	single point calibration, where n = any value
Cal,low,n	<cr>	low end calibration, where n = any value
Cal,high,n	<cr>	high end calibration, where n = any value
Cal,clear	<cr>	delete calibration data
Cal,?	<cr>	device calibrated?

## Example

## Response

Cal,dry <cr>	*OK <cr>
Cal,84 <cr>	*OK <cr>
Cal,low,12880 <cr>	*OK <cr>
Cal,high,80000 <cr>	*OK <cr>
Cal,clear <cr>	*OK <cr>
Cal,? <cr>	?CAL,0 <cr> or ?CAL,1 <cr> or ?CAL,2 <cr> one point two point *OK <cr>

### One point calibration:

Step 1. "cal,dry"

Step 2. "cal,n"

**Calibration complete!**

### Two point calibration:

Step 1 "cal,dry"

Step 2 "cal,low,n"

Step 3 "cal,high.n"

**Calibration complete!**

# Export calibration

## Command syntax

Export: Use this command to download calibration settings

**Export,?** <cr> calibration string info

**Export** <cr> export calibration string from calibrated device

## Example

**Export,?** <cr>

## Response

**10,120** <cr>

### Response breakdown

**10, 120**

# of strings to export

# of bytes to export

Export strings can be up to 12 characters long,  
and is always followed by <cr>

**Export** <cr>

**Export** <cr>

**(7 more)**

**Export** <cr>

**Export** <cr>

**59 6F 75 20 61 72** <cr> **(1 of 10)**

**65 20 61 20 63 6F** <cr> **(2 of 10)**


**⋮**

**6F 6C 20 67 75 79** <cr> **(10 of 10)**

**\*DONE**

Disabling \*OK simplifies this process

**Export** <cr>

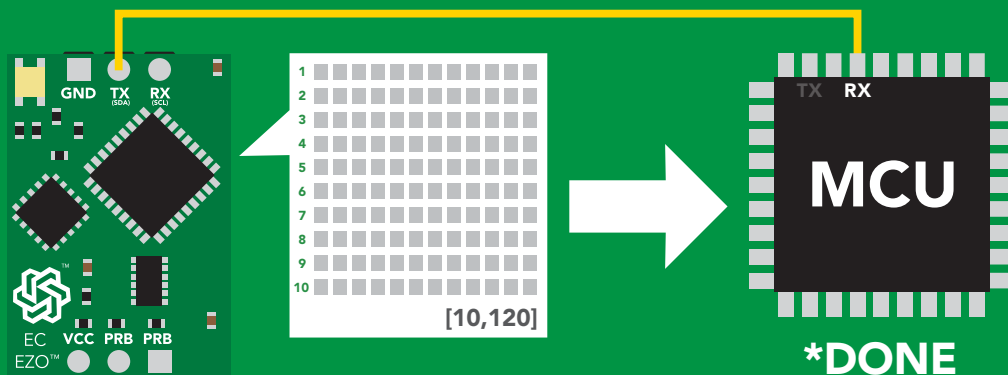

# Import calibration

## Command syntax

**Import:** Use this command to upload calibration settings to one or more devices.

**Import,n** <cr> import calibration string to new device

## Example

**Import, 59 6F 75 20 61 72** <cr> (1 of 10)

**Import, 65 20 61 20 63 6F** <cr> (2 of 10)

⋮

**Import, 6F 6C 20 67 75 79** <cr> (10 of 10)

## Response


**\*OK** <cr>

**\*OK** <cr>

⋮


**\*OK** <cr>

**Import,n** <cr>

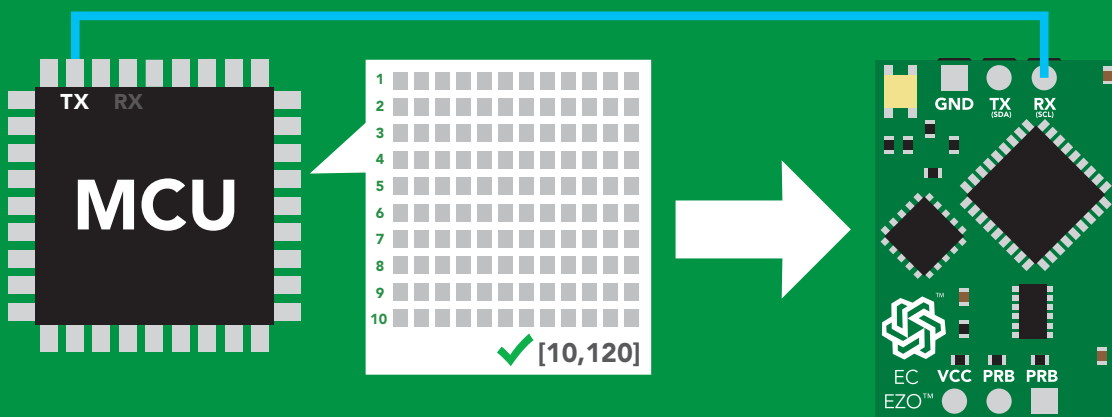

**\*OK** <cr>

system will reboot

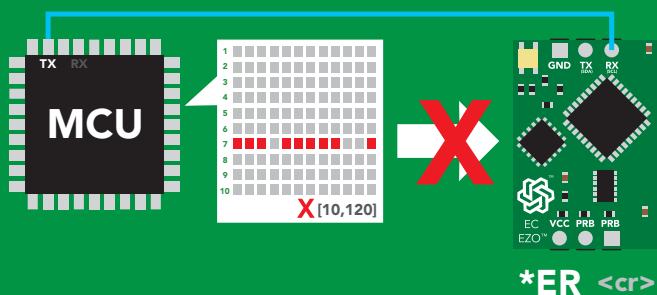

**\*ER** <cr>

**\* If one of the imported strings is not correctly entered, the device will not accept the import, respond with \*ER and reboot.**

# Setting the probe type

## Command syntax

K 1.0 is the default value

K,n <cr> n = any value; floating point in ASCII

K,? <cr> probe K value?

### Example

### Response

K,10 <cr>

\*OK <cr>

K,? <cr>

?K,10 <cr>  
\*OK <cr>



K 0.1



K 1.0



K 10

# Temperature compensation

## Command syntax

Default temperature = 25°C

Temperature is always in Celsius

Temperature is not retained if power is cut

**T,n** <cr> n = any value; floating point or int

**T,?** <cr> compensated temperature value?

**RT,n** <cr> set temperature compensation and take a reading\*

\* This is a new command for firmware V2.13

## Example

## Response

T,19.5 <cr>


\*OK <cr>

RT,19.5 <cr>


\*OK <cr>  
8.91 <cr>

T,? <cr>

?T,19.5 <cr>  
\*OK <cr>

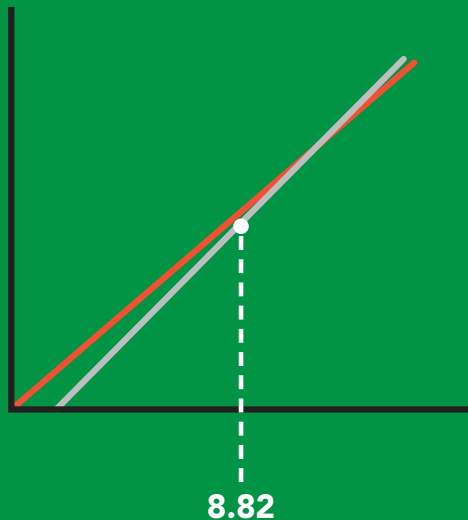

→  
T,19.5 <cr>

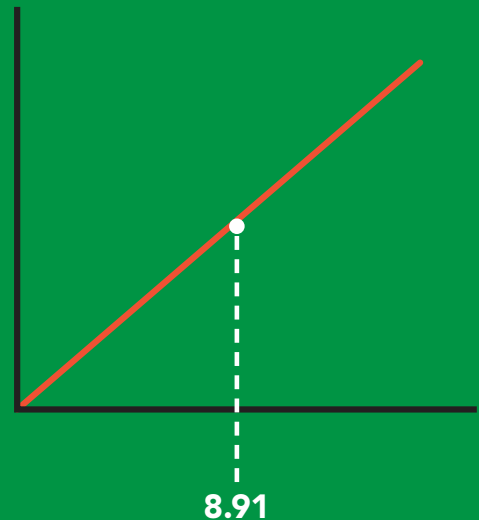

# Enable/disable parameters from output string

## Command syntax

O, [parameter],[1,0] <cr> enable or disable output parameter

O,? <cr> enabled parameter?

## Example

O,EC,1 / O,EC,0 <cr>

O,TDS,1 / O,TDS,0 <cr>

O,S,1 / O,S,0 <cr>

O,SG,1 / O,SG,0 <cr>

O,? <cr>

## Response

\*OK <cr> enable / disable conductivity

\*OK <cr> enable / disable total dissolved solids

\*OK <cr> enable / disable salinity

\*OK <cr> enable / disable specific gravity

?,O,EC,TDS,S,SG <cr> if all are enabled

### Parameters

EC conductivity  
TDS total dissolved solids  
S salinity  
SG specific gravity

### Followed by 1 or 0

1 enabled  
0 disabled

\* If you disable all possible data types your readings will display "no output".

# Naming device

## Command syntax

Name,n <cr> set name

Name,? <cr> show name

n =

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Up to 16 ASCII characters

## Example

## Response

Name,zzt <cr>


\*OK <cr>

Name,? <cr>

?Name,zzt <cr>


\*OK <cr>

Name,zzt

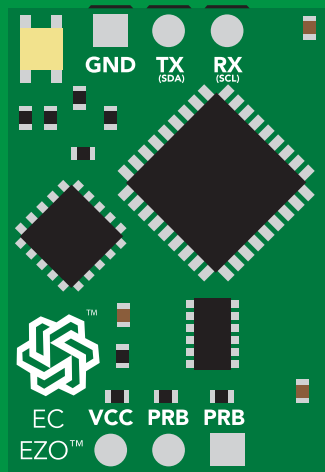

\*OK <cr>

Name,?

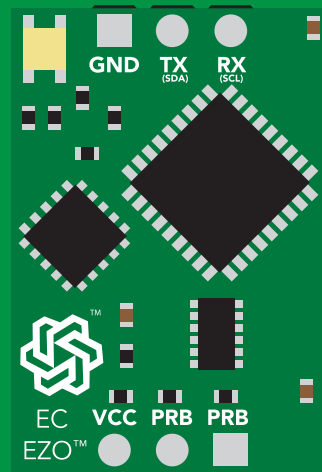

Name,zzt <cr>

\*OK <cr>

# Device information

## Command syntax

```
i <cr> device information
```

### Example

```
i <cr>
```

### Response

```
?i,EC,2.10 <cr>  
*OK <cr>
```

## Response breakdown

?i,	EC,	2.10
	↑	↑
	Device	Firmware



# Response codes

## Command syntax

- \*OK,1** <cr> enable response **default**
- \*OK,0** <cr> disable response
- \*OK,?** <cr> response on/off?

## Example

## Response

**R** <cr>

**1,413** <cr>  
**\*OK** <cr>

**\*OK,0** <cr>

no response, **\*OK** disabled

**R** <cr>

**1,413** <cr> **\*OK** disabled

**\*OK,?** <cr>

**?\*OK,1** <cr> or **?\*OK,0** <cr>

## Other response codes

- \*ER** unknown command
- \*OV** over volt ( $VCC \geq 5.5V$ )
- \*UV** under volt ( $VCC \leq 3.1V$ )
- \*RS** reset
- \*RE** boot up complete, ready
- \*SL** entering sleep mode
- \*WA** wake up

These response codes  
cannot be disabled

# Reading device status

## Command syntax

Status <cr> voltage at Vcc pin and reason for last restart

### Example

Status <cr>

### Response

?Status,P,5.038 <cr>  
\*OK <cr>

## Response breakdown

?Status,	P,	5.038
	↑	↑
	Reason for restart	Voltage at Vcc

### Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

# Sleep mode/low power

## Command syntax

Send any character or command to awaken device.

**Sleep** <cr> enter sleep mode/low power

## Example

## Response

**Sleep** <cr>

**\*OK** <cr>

**\*SL** <cr>

**Any command**


**\*WA** <cr> wakes up device

**5V**


STANDBY	SLEEP
18.14 mA	0.7 mA

**3.3V**


16.85 mA	0.4 mA
----------	--------

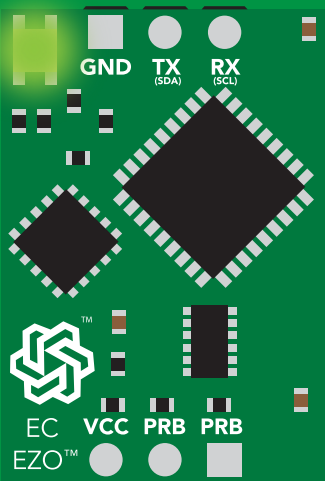

**Standby**  
**18.14 mA**

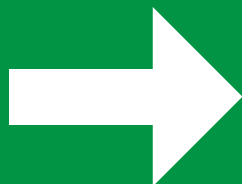

**Sleep** <cr>

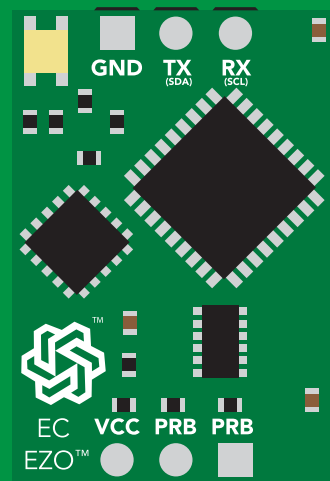

**Sleep**  
**0.7 mA**

# Change baud rate

## Command syntax

Baud,n <cr> change baud rate

### Example

Baud,38400 <cr>

### Response


\*OK <cr>

Baud,? <cr>

?Baud,38400 <cr>


\*OK <cr>

n =   
 300  
 1200  
 2400  
 **9600 default**  
 19200  
 38400  
 57600  
 115200

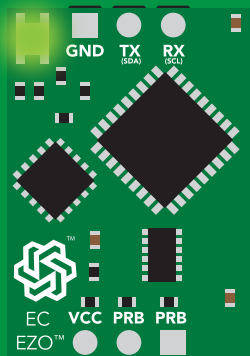


Standby

Baud,38400 <cr>

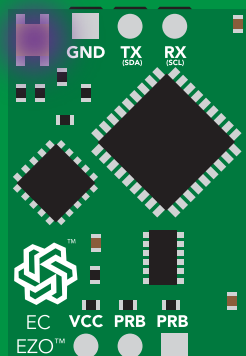


Changing  
baud rate

\*OK <cr>

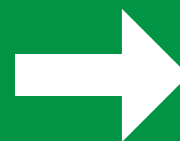

(reboot)

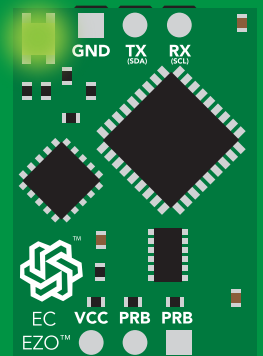

Standby

# Protocol lock

## Command syntax

Locks device to UART mode.

Plock,1 <cr> enable Plock

Plock,0 <cr> disable Plock **default**

Plock,? <cr> Plock on/off?

## Example

## Response

Plock,1 <cr>

\*OK <cr>


Plock,0 <cr>

\*OK <cr>

Plock,? <cr>


?Plock,1 <cr> or ?Plock,0 <cr>

Plock,1

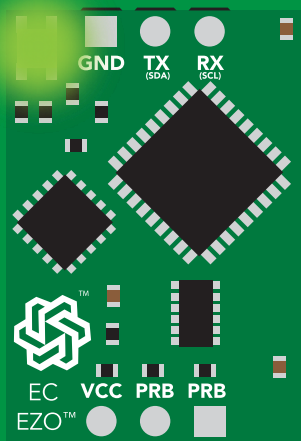


\*OK <cr>

I2C,100

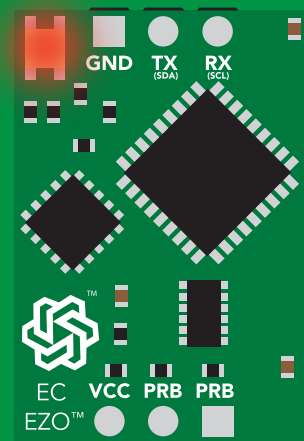

cannot change to I<sup>2</sup>C  
\*ER <cr>

Short

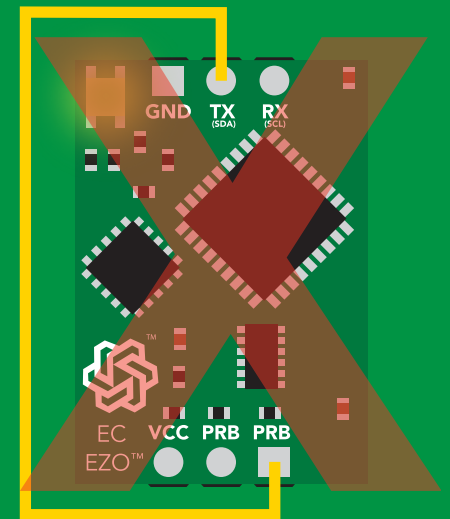

cannot change to I<sup>2</sup>C

# Factory reset

## Command syntax

Clears calibration  
LED on  
"\*OK" enabled

Factory <cr> enable factory reset



## Example

## Response


Factory <cr>

\*OK <cr>

Factory <cr>

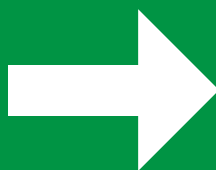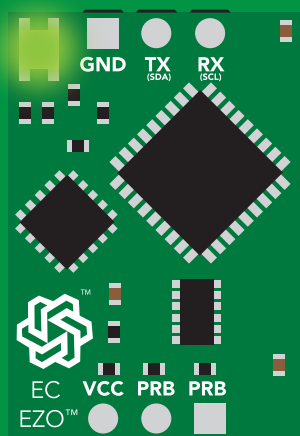

(reboot)

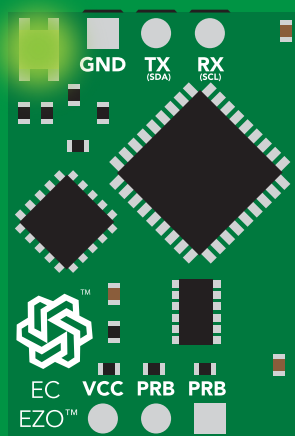

\*OK <cr>

\*RS <cr>

\*RE <cr>

Baud rate will not change

# Change to I<sup>2</sup>C mode

## Command syntax

Default I<sup>2</sup>C address 100 (0x64)

I2C,n <cr> sets I<sup>2</sup>C address and reboots into I<sup>2</sup>C mode

n = any number 1 – 127

### Example

I2C,100 <cr>

### Response

\*OK (reboot in I<sup>2</sup>C mode)


### Wrong example

I2C,139 <cr> n ≠ 127

### Response


\*ER <cr>

I2C,100

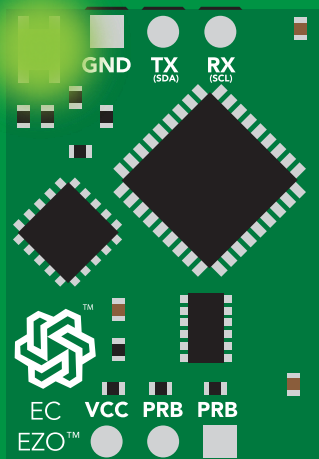


Green

\*OK <cr>

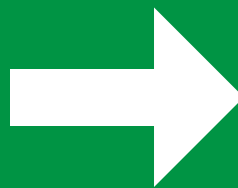

(reboot)

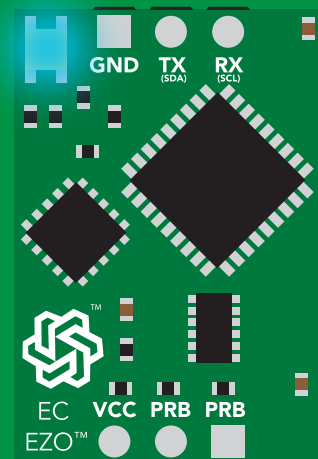

Blue


now in I<sup>2</sup>C mode

# Manual switching to I<sup>2</sup>C


- Make sure Plock is set to 0
- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to the right PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from **Green** to **Blue**
- Disconnect ground (power off)
- Reconnect all data and power

Manually switching to I<sup>2</sup>C will set the I<sup>2</sup>C address to 100 (0x64)

## Example

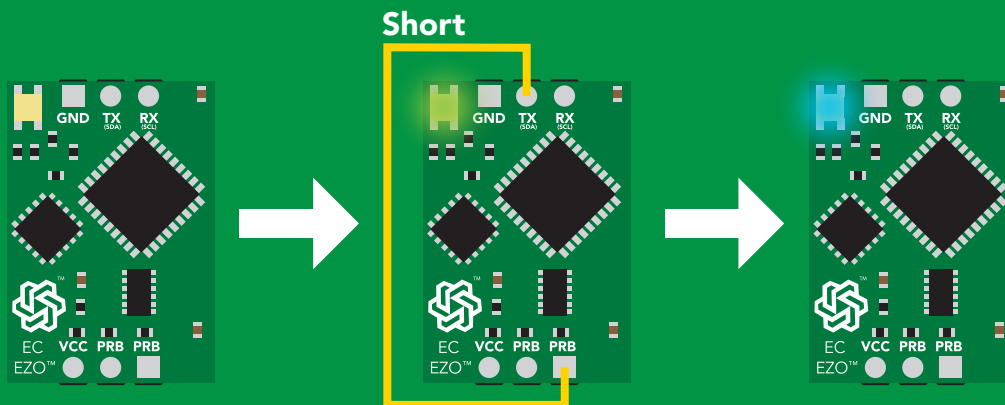

## Wrong Example

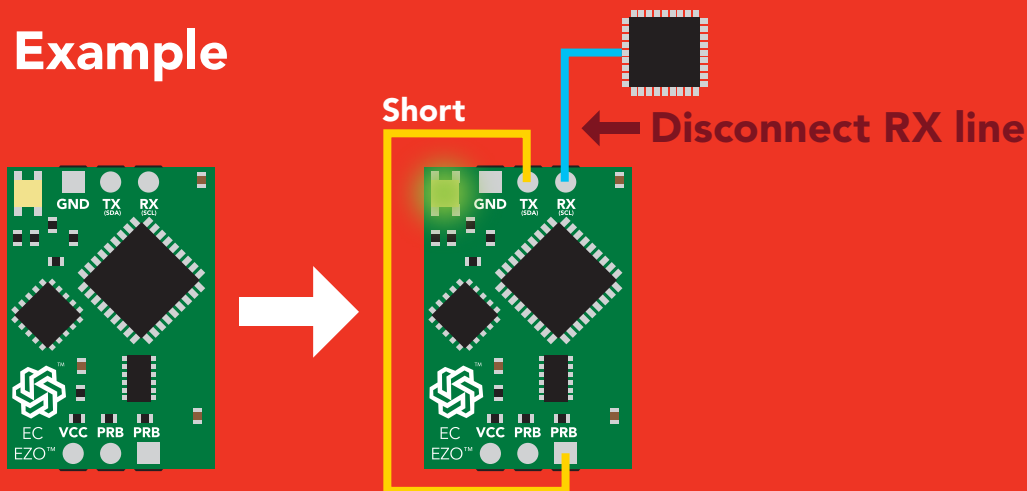



# I<sup>2</sup>C mode

The I<sup>2</sup>C protocol is **considerably more complex** than the UART (RS-232) protocol. Atlas Scientific assumes the embedded systems engineer understands this protocol.

To set your EZO™ device into I<sup>2</sup>C mode [click here](#)

## Settings that are retained if power is cut

- Calibration
- Change I<sup>2</sup>C address
- Enable/disable parameters
- Hardware switch to UART mode
- LED control
- Protocol lock
- Software switch to UART mode

## Settings that are **NOT** retained if power is cut

- Find
- Sleep mode
- Temperature compensation

# I<sup>2</sup>C mode

I<sup>2</sup>C address (0x01 – 0x7F)  
**100 (0x64) default**


V<sub>CC</sub> 3.3V – 5.5V

Clock speed 100 – 400 kHz

SDA 

SCL 

 VCC  
0V 0V

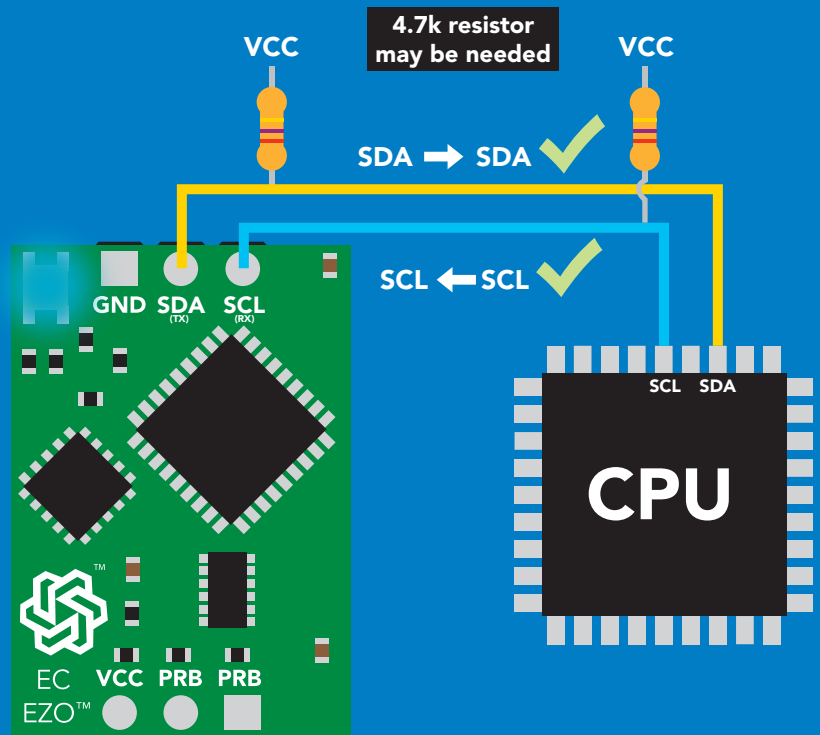

## Data format

**Reading** Conductivity =  $\mu\text{S/cm}$   
Total dissolved solids = **ppm**  
Salinity = **PSU (ppt)** 0.00 – 42.00  
Specific gravity  
(sea water only) = 1.00 – 1.300

**Units** EC, TDS, SAL, SG

**Encoding** ASCII

**Format**

**Data type**

**Decimal places** 3

**Smallest string** 3 characters

**Largest string** 40 characters

**string**


**floating point**

**3**


**3 characters**

**40 characters**


# Sending commands to device

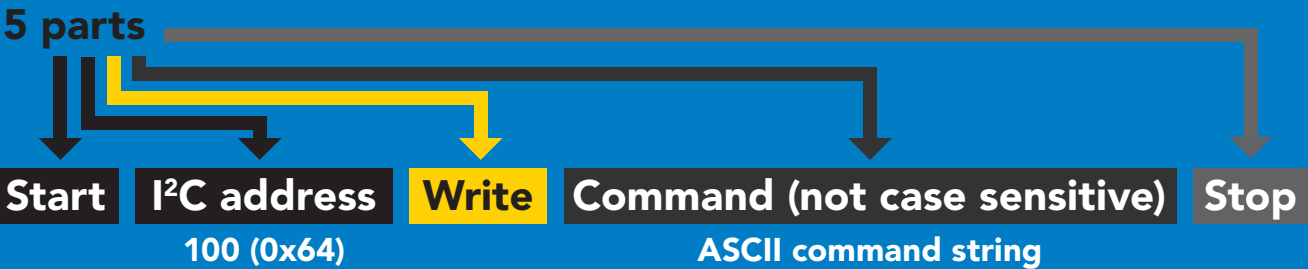



## Example

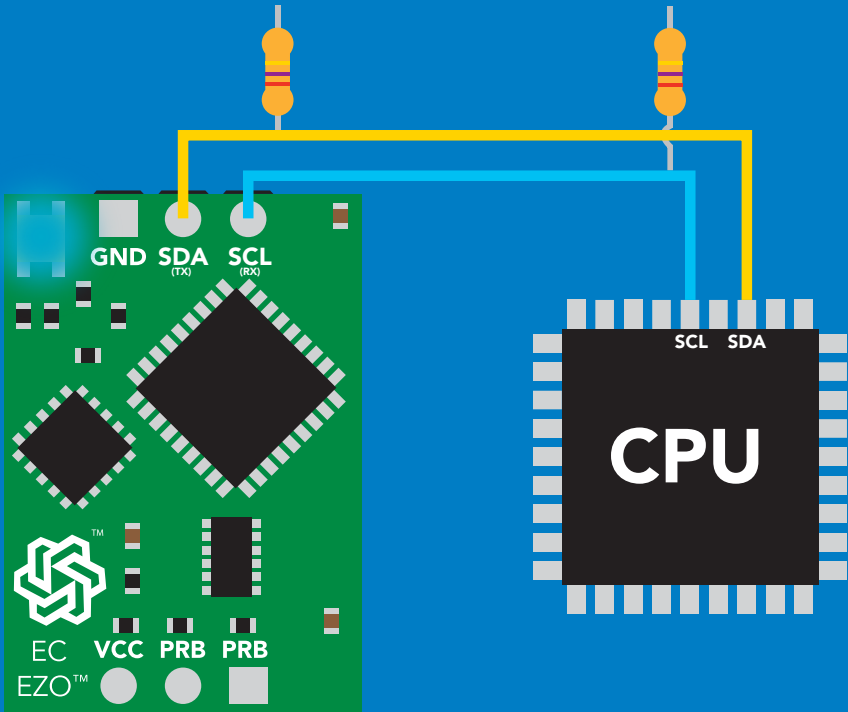


## Advanced

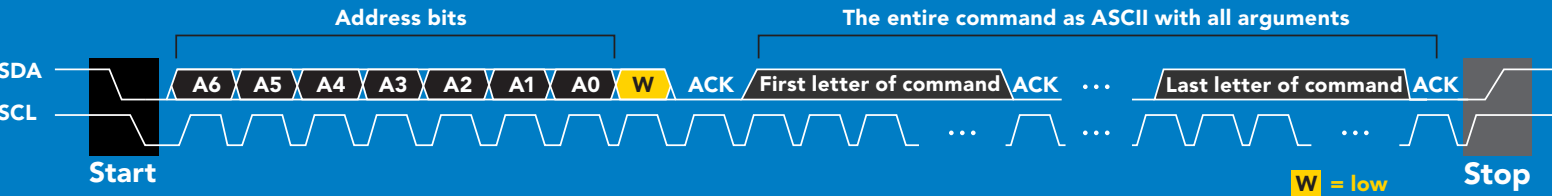

# Requesting data from device

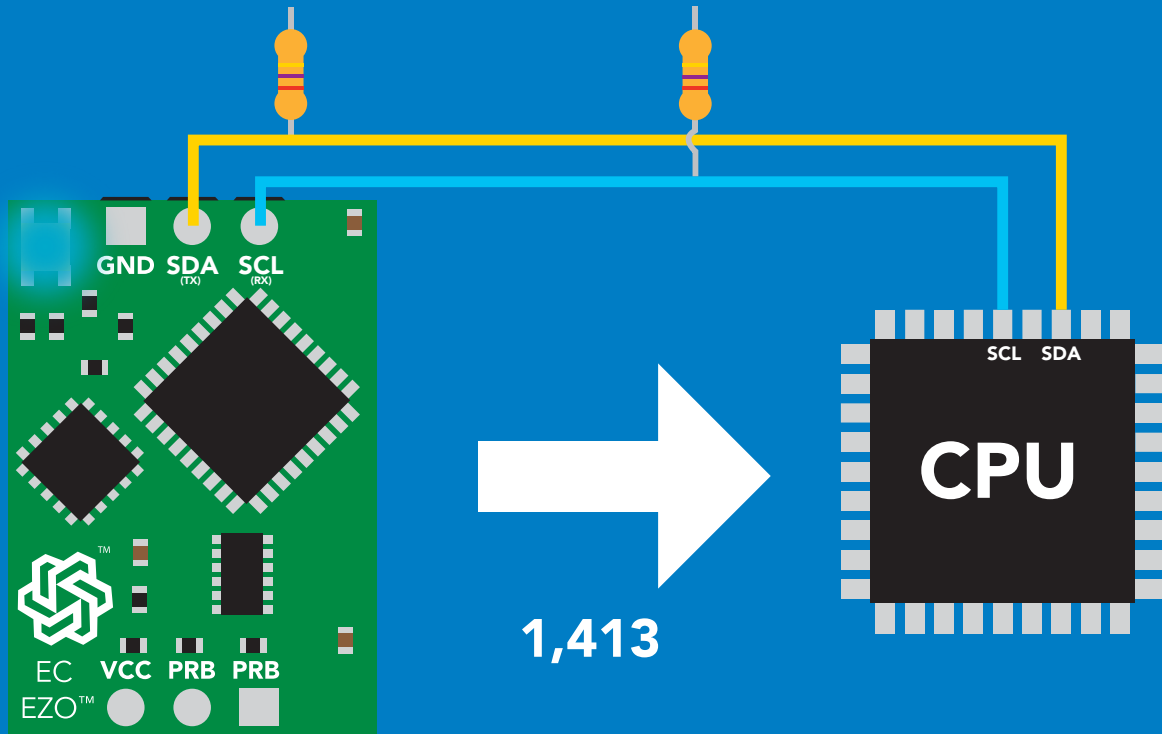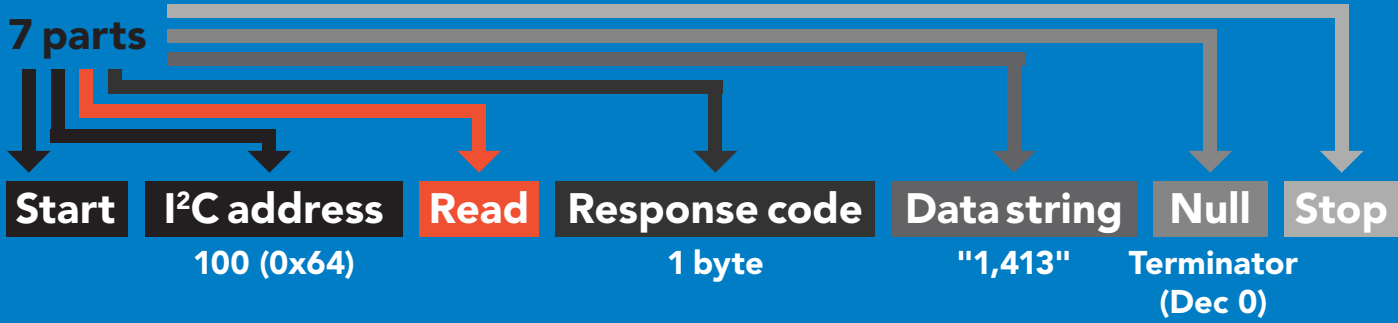

# Advanced

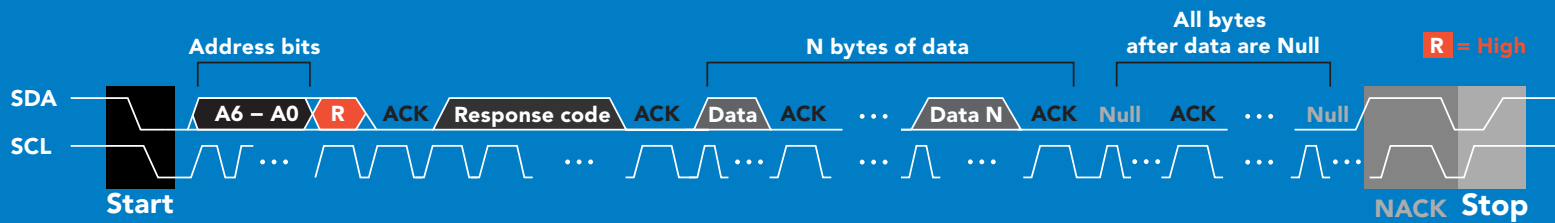


**1** **49** **44** **52** **49** **51** **0** = 1,413

Dec      ASCII      Dec

# Response codes

After a command has been issued, a 1 byte response code can be read in order to confirm that the command was processed successfully.

*Reading back the response code is completely optional, and is not required for normal operation.*

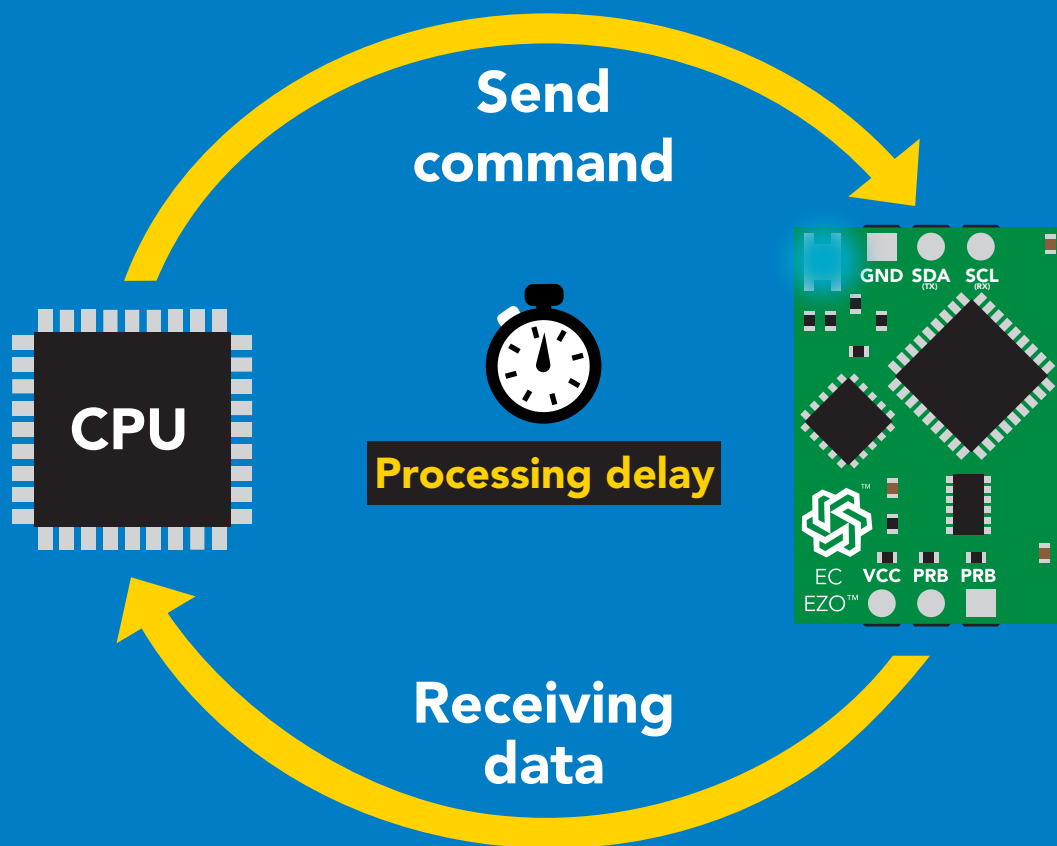

## Example

```
I2C_start;  
I2C_address;  
I2C_write(EZO_command);  
I2C_stop;
```

**delay(300);**



**Processing delay**

```
I2C_start;  
I2C_address;  
Char[ ] = I2C_read;  
I2C_stop;
```


The response code will always be 254, if you do not wait for the processing delay.

### Response codes

Single byte, not string


<b>255</b>	<b>no data to send</b>
<b>254</b>	<b>still processing, not ready</b>
<b>2</b>	<b>syntax error</b>
<b>1</b>	<b>successful request</b>

# LED color definition

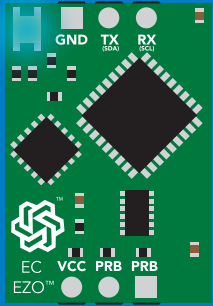


**Blue**

**I<sup>2</sup>C standby**

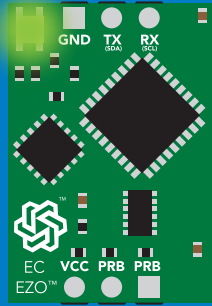


**Green**

**Taking reading**

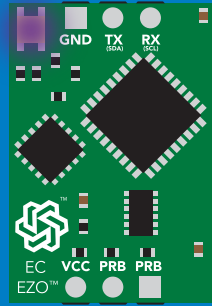


**Purple**

**Changing  
I<sup>2</sup>C address**

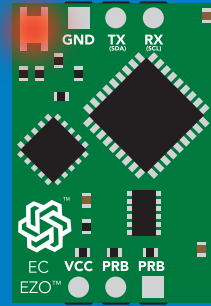

**Red**

**Command  
not understood**

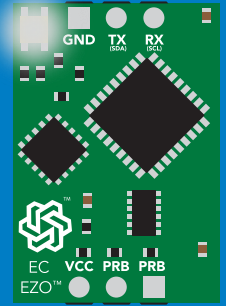

**White**

**Find**

**5V**

LED ON  
**+2.5 mA**

**3.3V**

**+1 mA**

# I<sup>2</sup>C mode

## command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	
Baud	switch back to UART mode	pg. 67
Cal	performs calibration	pg. 55
Export	export calibration	pg. 56
Factory	enable factory reset	pg. 66
Find	finds device with blinking white LED	pg. 53
i	device information	pg. 61
I2C	change I <sup>2</sup> C address	pg. 65
Import	import calibration	pg. 57
K	Set probe type	pg. 58
L	enable/disable LED	pg. 52
O	enable/disable parameters	pg. 60
Plock	enable/disable protocol lock	pg. 64
R	returns a single reading	pg. 54
Sleep	enter sleep mode/low power	pg. 63
Status	retrieve status information	pg. 62
T	temperature compensation	pg. 59

# LED control

## Command syntax

300ms  processing delay

L,1 LED on **default**

L,0 LED off

L,? LED state on/off?

## Example

## Response

L,1


 **Wait 300ms**  
1 Dec 0 Null

L,0


 **Wait 300ms**  
1 Dec 0 Null

L,?

 **Wait 300ms**  
1 Dec ?L,1 0 Null or 1 Dec ?L,0 0 Null

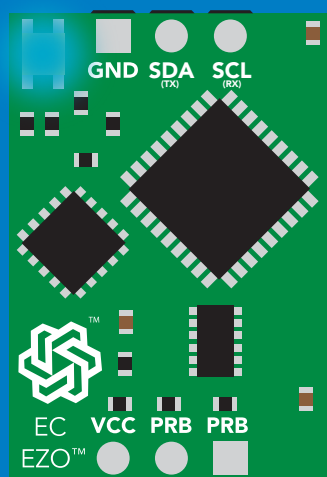

L,1

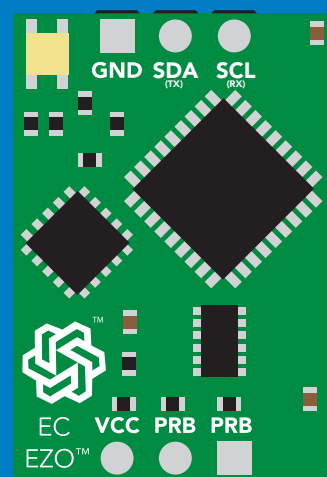

L,0



# Find

300ms  processing delay

## Command syntax

This command will disable continuous mode  
Send any character or command to terminate find.


**Find**      LED rapidly blinks white, used to help find device

## Example

## Response

**Find**

 **Wait 300ms**      **1**      **0**  
Dec      Null

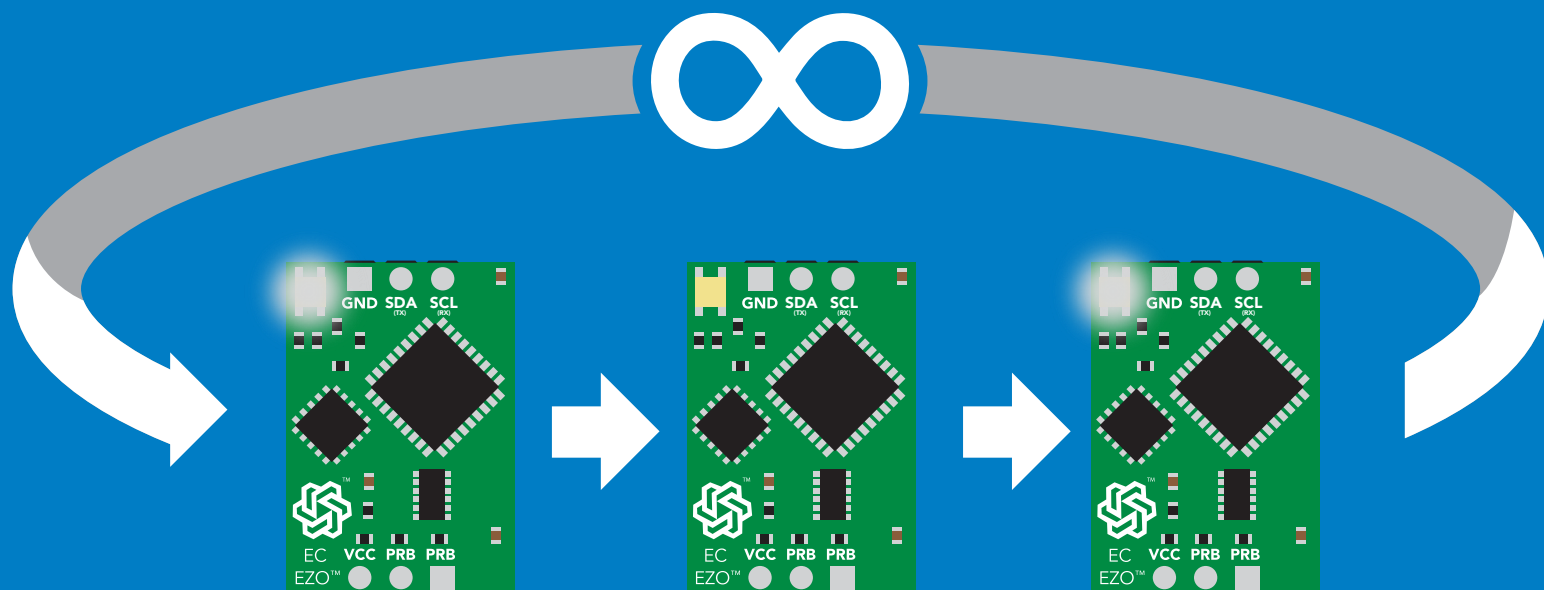

# Taking reading

## Command syntax


600ms  processing delay

R return 1 reading

## Example



## Response

R	 Wait 600ms	1 Dec	1,413 ASCII	0 Null
---	---	----------	----------------	-----------


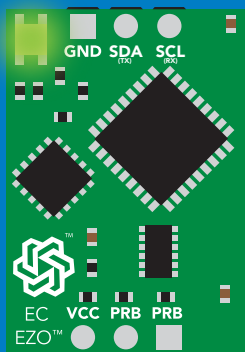


Green

Taking reading

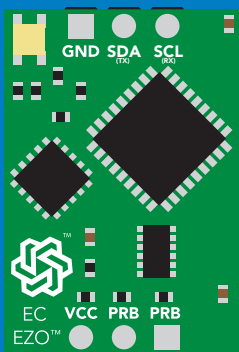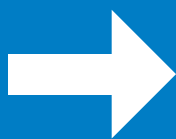

Transmitting

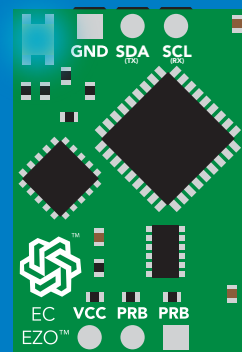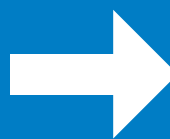

Blue

Standby

# Calibration

600ms  processing delay

## Command syntax

Dry calibration must always be done first!

Cal,dry	dry calibration
Cal,n	single point calibration, where n = any value
Cal,low,n	low end calibration, where n = any value
Cal,high,n	high end calibration, where n = any value
Cal,clear	delete calibration data
Cal,?	device calibrated?

## Example

## Response

Cal,dry

 **Wait 600ms**

1	0
Dec	Null

Cal,84

 **Wait 600ms**

1	0
Dec	Null

Cal,low,12880

 **Wait 600ms**

1	0
Dec	Null

Cal,high,80000

 **Wait 600ms**


1	0
Dec	Null

Cal,clear

 **Wait 300ms**

1	0
Dec	Null

Cal,?

 **Wait 300ms**

1	?CAL,0	0	or	1	?CAL,1	0	or	1	?CAL,2	0
Dec	ASCII	Null		Dec	ASCII	Null		Dec	ASCII	Null
					one point				two point	

### One point calibration:

Step 1. "cal,dry"

Step 2. "cal,n"

**Calibration complete!**

### Two point calibration:

Step 1 "cal,dry"

Step 2 "cal,low,n"

Step 3 "cal,high,n"

**Calibration complete!**

# Export calibration

300ms  processing delay

## Command syntax

Export: Use this command to download calibration settings

Export,? calibration string info

Export export calibration string from calibrated device

## Example

## Response

Export,?



Wait 300ms

1

Dec

10,120

ASCII

0

Null

### Response breakdown

10, 120

# of strings to export # of bytes to export

Export strings can be up to 12 characters long

Export



Wait 300ms

1

Dec

59 6F 75 20 61 72

ASCII

0

Null

(1 of 10)

Export



Wait 300ms

1

Dec

65 20 61 20 63 6F

ASCII

0

Null

(2 of 10)

(7 more)

⋮

Export



Wait 300ms

1

Dec

6F 6C 20 67 75 79

ASCII

0

Null

(10 of 10)

Export



Wait 300ms

1

Dec

\*DONE

ASCII

0

Null

# Import calibration

300ms  processing delay

## Command syntax

Import: Use this command to upload calibration settings to one or more devices.

Import,n    import calibration string to new device

## Example

Import, 59 6F 75 20 61 72    (1 of 10)

Import, 65 20 61 20 63 6F    (2 of 10)

⋮

Import, 6F 6C 20 67 75 79    (10 of 10)

## Response


 **1** **0**  
Wait 300ms    Dec    Null

 **1** **0**  
Wait 300ms    Dec    Null

⋮


 **1** **0**  
Wait 300ms    Dec    Null

Import,n

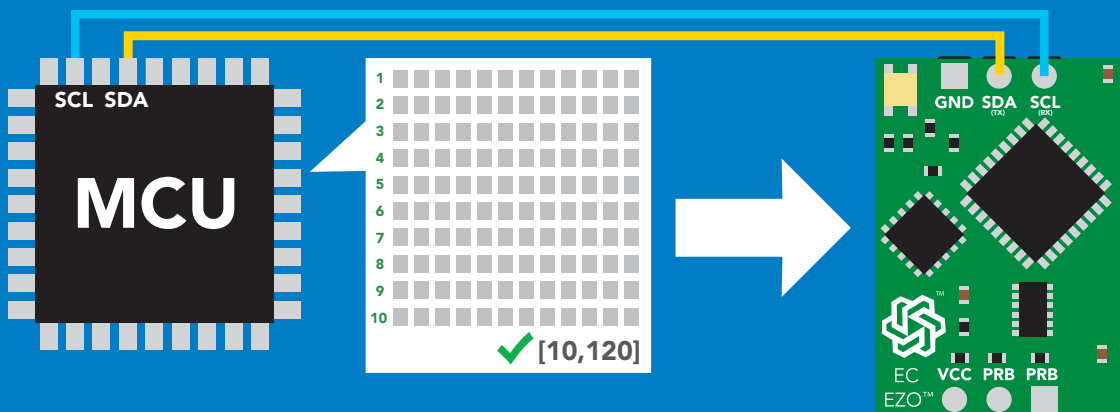

**1** **\*Pending** **0**  
Dec    ASCII    Null

system will reboot

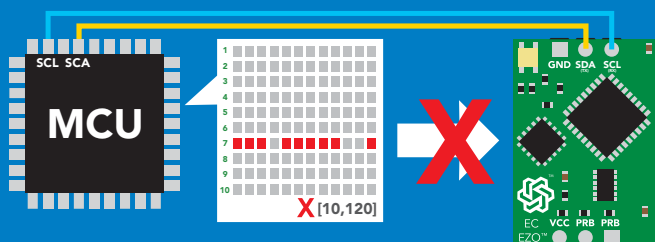

reboot

**\* If one of the imported strings is not correctly entered, the device will not accept the import and reboot.**

# Setting the probe type

## Command syntax

300ms  processing delay

K,n    n = any value; floating point in ASCII  
K,?    probe K value?

K 1.0 is the default value

### Example

### Response

K,10

  
Wait 300ms

1

Dec

0

Null

K,?

  
Wait 600ms

1

Dec

K,10

ASCII

0

Null



K 0.1



K 1.0



K 10

# Temperature compensation

## Command syntax

Default temperature = 25°C

Temperature is always in Celsius

Temperature is not retained if power is cut

**T,n** n = any value; floating point or int    300ms  processing delay

**T,?** compensated temperature value?

**RT,n** set temperature compensation and take a reading\*

\* This is a new command for firmware V2.13

## Example

## Response

**T,19.5**


 Wait 300ms    1 Dec    0 Null

**RT,19.5**


 Wait 900ms    1 Dec    8.91 ASCII    0 Null

**T,?**

 Wait 300ms    1 Dec    ?T,19.5 ASCII    0 Null

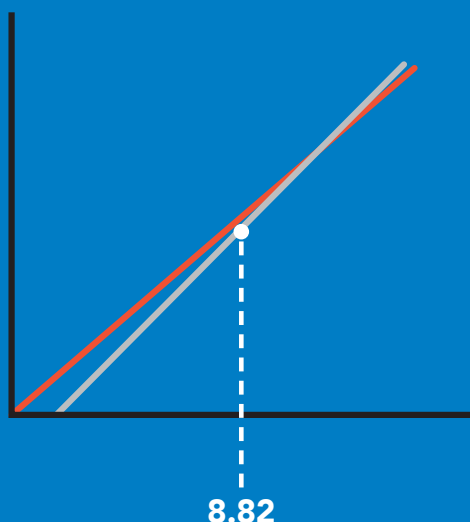

→  
T,19.5

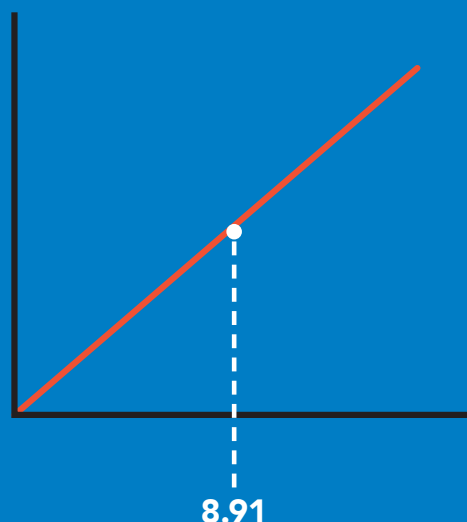

# Enable/disable parameters from output string

## Command syntax

300ms  processing delay

O, [parameter],[1,0]

enable or disable output parameter

O,?

enabled parameter?

## Example

O,EC,1 / O,EC,0



1 0  
Dec Null

enable / disable conductivity

O,TDS,1 / O,TDS,0



1 0  
Dec Null

enable / disable total dissolved solids

O,S,1 / O,S,0



1 0  
Dec Null

enable / disable salinity

O,SG,1 / O,SG,0



1 0  
Dec Null

enable / disable specific gravity

O,?



1 ?O,EC,TDS,S,SG 0  
Dec ASCII Null

if all are enabled

## Parameters

EC conductivity  
TDS total dissolved solids  
S salinity  
SG specific gravity

## Followed by 1 or 0

1 enabled  
0 disabled

**\* If you disable all possible data types your readings will display "no output".**



# Device information

## Command syntax

300ms  processing delay

i device information

## Example

i

## Response



Wait 300ms

1

Dec

?i,EC, 2.10

ASCII

0

Null

## Response breakdown

?i, EC, 2.10  
↑     ↑  
Device   Firmware

# Reading device status

## Command syntax

300ms  processing delay

Status voltage at Vcc pin and reason for last restart

## Example

## Response

Status



1

Dec

?Status,P,5.038

ASCII

0

Null

## Response breakdown

?Status,

P,

Reason for restart

5.038

Voltage at Vcc

### Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

# Sleep mode/low power

## Command syntax

**Sleep**   enter sleep mode/low power

Send any character or command to awaken device.

### Example

### Response

**Sleep**


**no response**

Do not read status byte after issuing sleep command.


**Any command**

**wakes up device**


5V	STANDBY	SLEEP
	18.14 mA	0.7 mA
3.3V	16.85 mA	0.4 mA

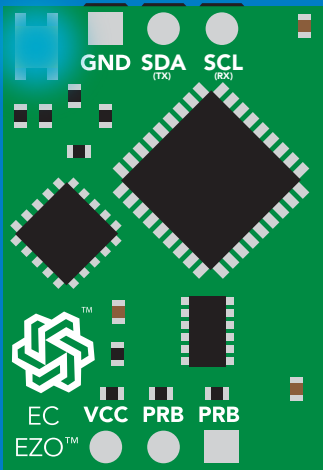

Standby

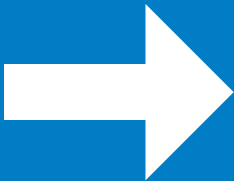

Sleep

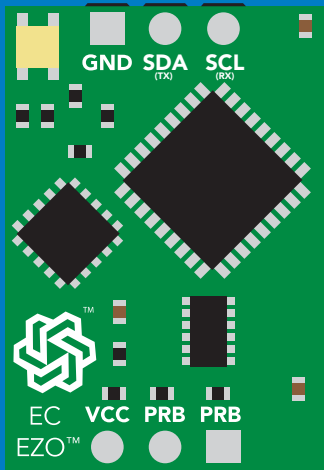

Sleep

# Protocol lock

## Command syntax

300ms  processing delay

Plock,1 enable Plock

Plock,0 disable Plock

Plock,? Plock on/off?

Locks device to I<sup>2</sup>C mode.

default

## Example

## Response

Plock,1

 Wait 300ms  
1 0  
Dec Null

Plock,0




 Wait 300ms  
1 0  
Dec Null

Plock,?

 Wait 300ms  
1 ?Plock,1 0  
Dec ASCII Null

Plock,1

Baud, 9600

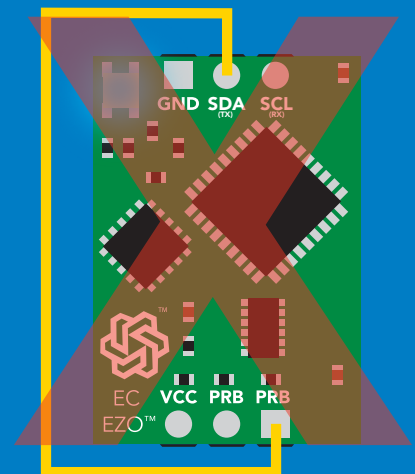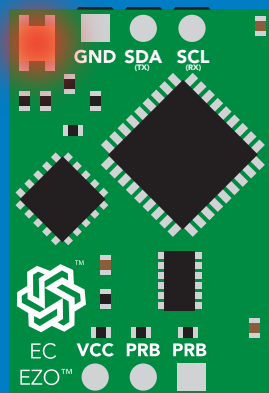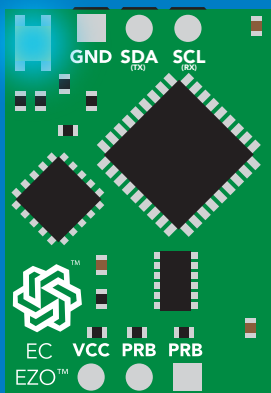

cannot change to UART

cannot change to UART

# I<sup>2</sup>C address change

## Command syntax

300ms  processing delay

I2C,n sets I<sup>2</sup>C address and reboots into I<sup>2</sup>C mode

## Example

## Response

I2C,101

device reboot



## Warning!

Changing the I<sup>2</sup>C address will prevent communication between the circuit and the CPU until your CPU is updated with the new I<sup>2</sup>C address.


Default I<sup>2</sup>C address is 100 (0x64).

n = any number 1 – 127

I2C,101

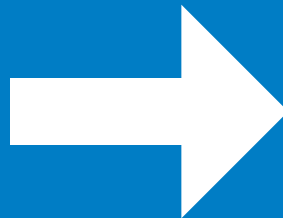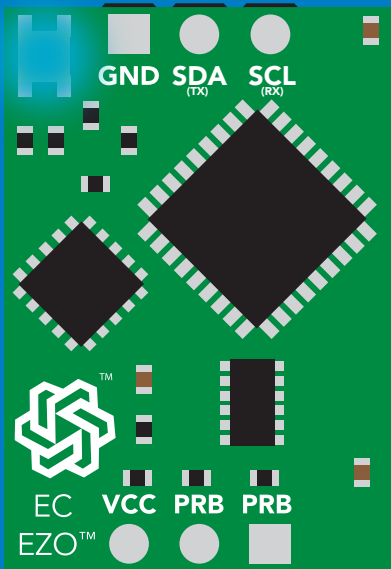

(reboot)

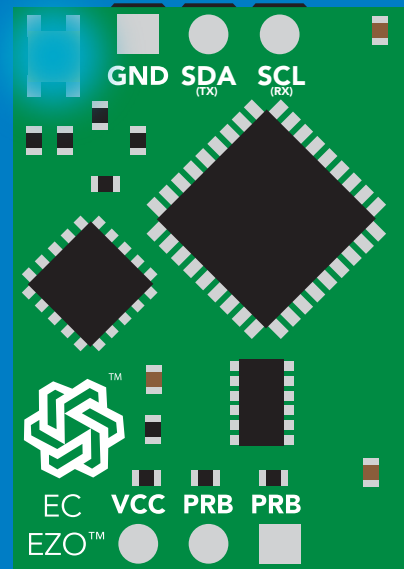

# Factory reset

## Command syntax

Factory reset will not take the device out of I<sup>2</sup>C mode.

Factory    enable factory reset

I<sup>2</sup>C address will not change

### Example



### Response

Factory


device reboot

Clears calibration  
LED on  
Response codes enabled

### Factory

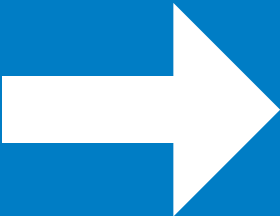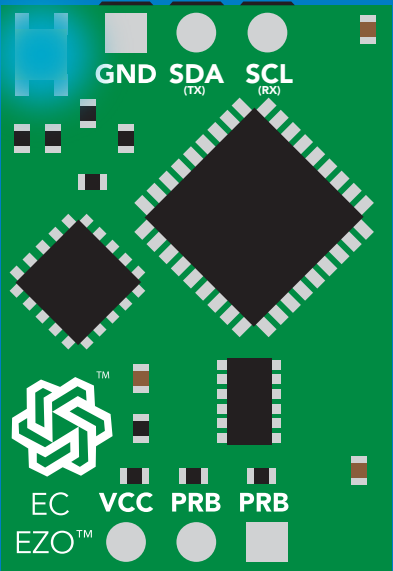

(reboot)

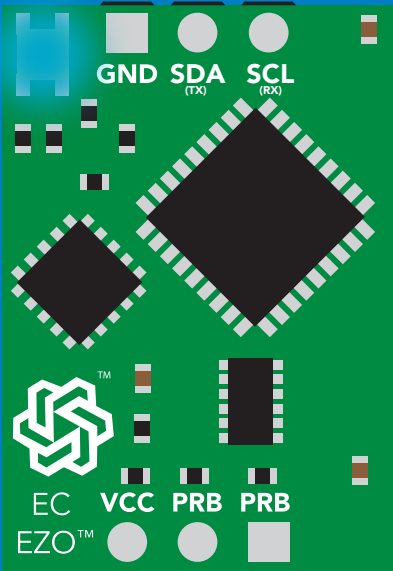

# Change to UART mode

## Command syntax

Baud,n switch from I<sup>2</sup>C to UART



### Example

Baud,9600


### Response

reboot in UART mode

n =  $\left\{ \begin{array}{l} 300 \\ 1200 \\ 2400 \\ 9600 \\ 19200 \\ 38400 \\ 57600 \\ 115200 \end{array} \right.$

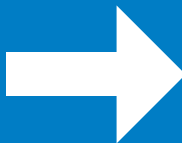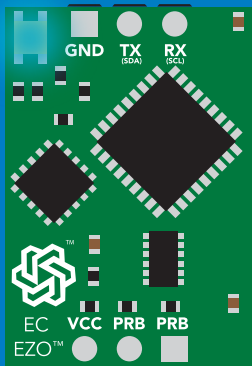


Baud,9600

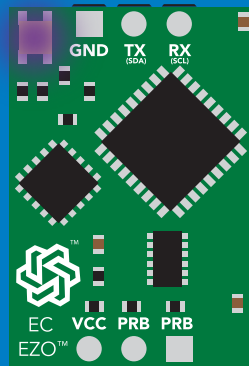

Changing to  
UART mode




(reboot)

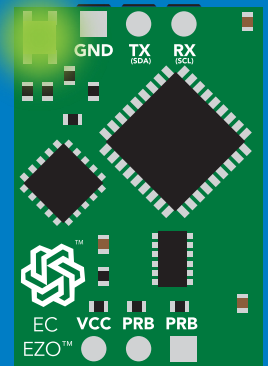


# Manual switching to UART

- Make sure Plock is set to 0
- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to the right PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from Blue to Green
- Disconnect ground (power off)
- Reconnect all data and power

## Example

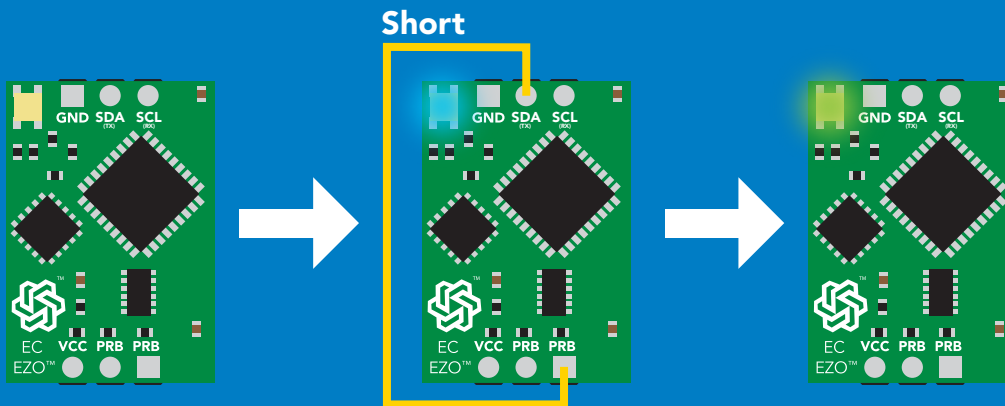


## Wrong Example

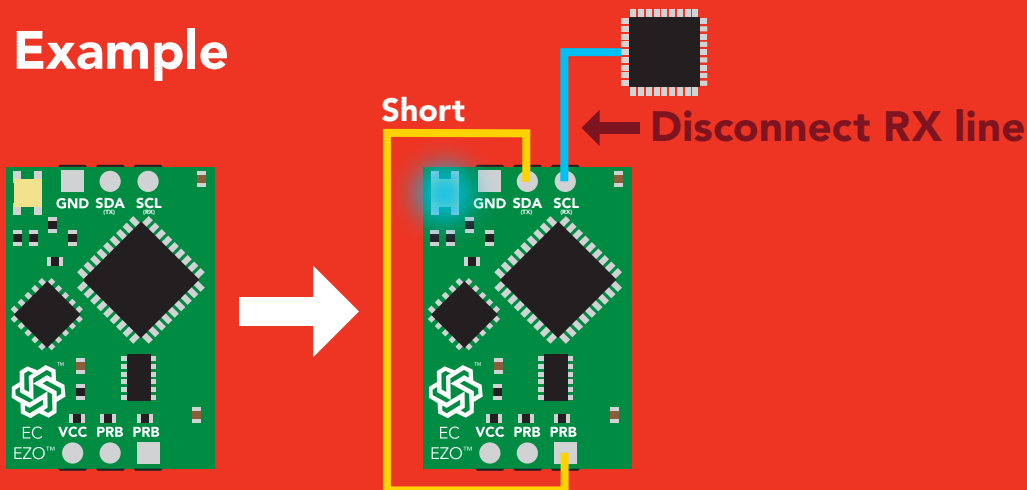





# EZO™ circuit footprint

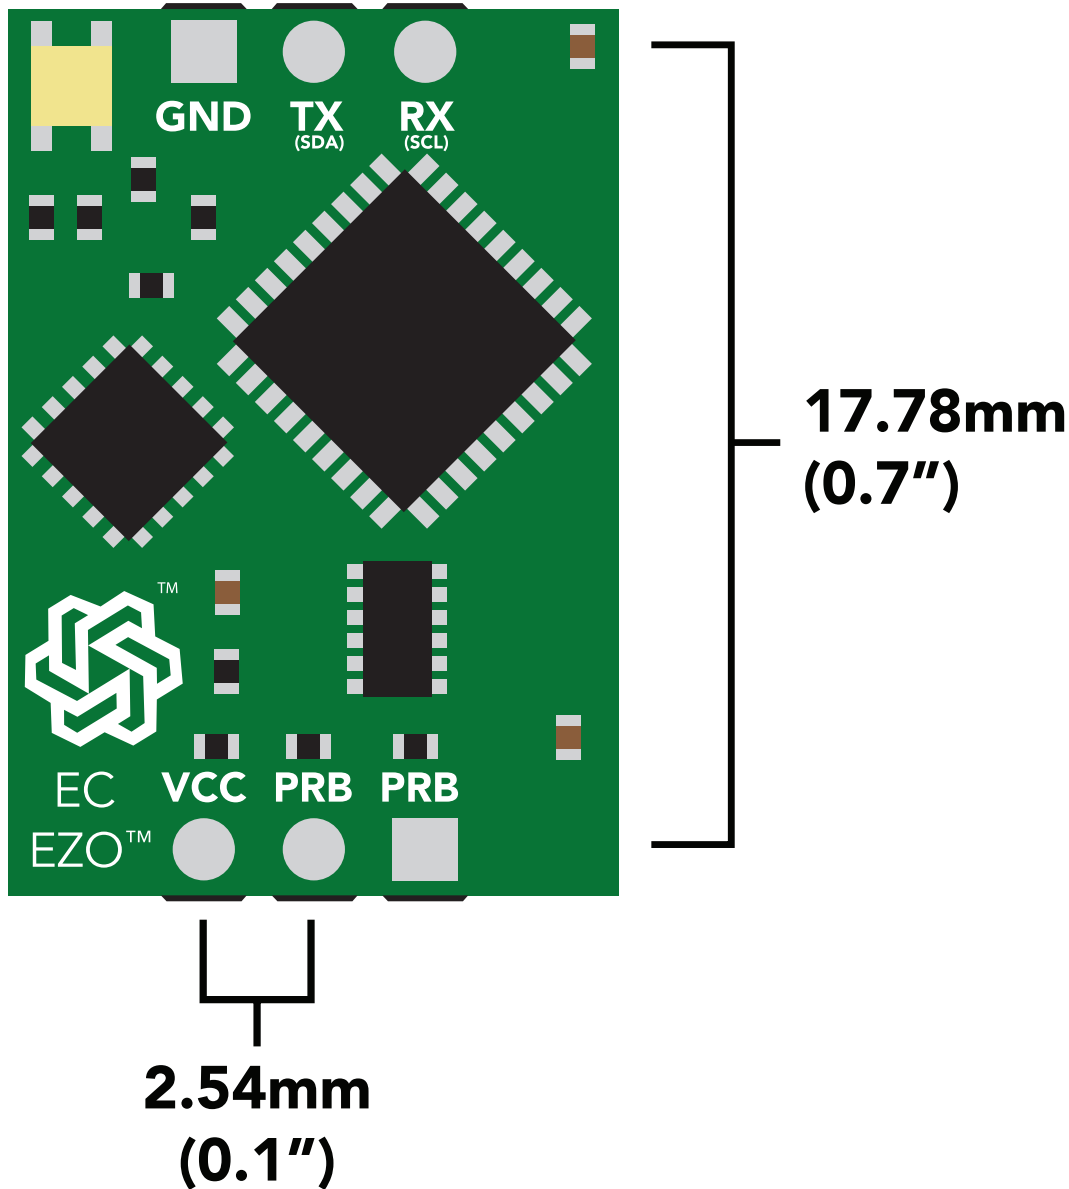


**1** In your CAD software, place a 8 position header.

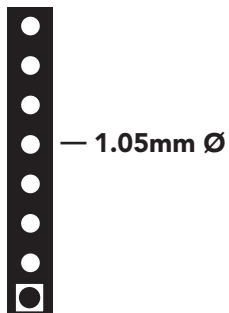

**2** Place a 3 position header at both top and bottom of the 8 position.

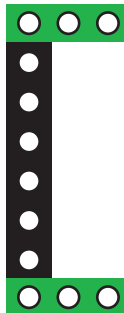

**3** Delete the 8 position header. The two 3 position headers are now 17.78mm (0.7") apart from each other.

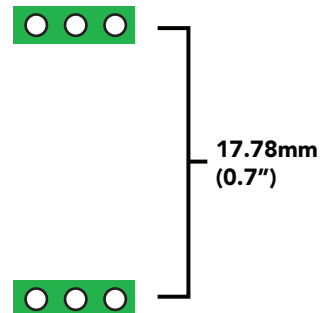

# Datasheet change log

## Datasheet V 6.0

Changed the K value range from 0.1 to 0.01 on pg 5.

## Datasheet V 5.9

Moved Default state to pg 17.

## Datasheet V 5.8

Revised conductivity probe range information on pg 5.

## Datasheet V 5.7

Revised response for the sleep command in UART mode on pg 39.

## Datasheet V 5.6

Added more information on the Export calibration and Import calibration commands.

## Datasheet V 5.5

Revised calibration theory pages, added information on temperature compensation on pg. 15, moved data isolation to pg 9, and correct wiring to pg 11.

## Datasheet V 5.4

Revised isolation schematic on pg. 13

## Datasheet V 5.3

### **Added new command:**

"RT,n" for Temperature compensation located on pages 30 (UART) & 55 (I<sup>2</sup>C).

Added firmware information to Firmware update list.

## Datasheet V 5.2

Revised calibration information on pages 27 & 52.

## Datasheet V 5.1

Added more information about temperature compensation on pages 30 & 55.

# Datasheet change log

## Datasheet V 5.0

Changed "Max rate" to "Response time" on cover page.

## Datasheet V 4.9

Removed note from certain commands about firmware version.  
Added steps to calibration command pages 27 (UART) and 52 (I<sup>2</sup>C).

## Datasheet V 4.8

Revised definition of response codes on pg 46.

## Datasheet V 4.7

Revised cover page art.

## Datasheet V 4.6

Updated calibration processing delay time on pg.52.

## Datasheet V 4.5

Revised Enable/disable parameters information on pages 31 & 56.

## Datasheet V 4.4

Updated High point calibration info on page 11.

## Datasheet V 4.3

Updated calibration info on pages 27 (UART) and 52 (I<sup>2</sup>C).

## Datasheet V 4.2

Revised Plock pages to show default value.

## Datasheet V 4.1

Corrected I<sup>2</sup>C calibration delay on pg. 52.

## Datasheet V 4.0

Revised entire datasheet.

# Firmware updates

V1.0 – Initial release (April 17, 2014)

V1.1 – (June 2, 2014)

- Change specific gravity equation to return 1.0 when the uS reading is < 1000 (previously returned 0.0)
- Change accuracy of specific gravity from 2 decimal places to 3 decimal places
- Don't save temperature changes to EEPROM

V1.2 – (Aug 1, 2014)

- Baud rate change is now a long, purple blink

V1.5 – Baud rate change (Nov 6, 2014)

- Change default baud rate to 9600

V1.6 – I2C bug (Dec 1, 2014)

- Fixed I<sup>2</sup>C bug where the circuit may inappropriately respond when other I2C devices are connected.

V1.8 – Factory (April 14, 2015)

- Changed "X" command to "Factory"

V1.95 – Plock (March 31, 2016)

- Added protocol lock feature "Plock"

V1.96 – EEPROM (April 26, 2016)

- Fixed bug where EEPROM would get erased if the circuit lost power 900ms into startup

V2.10 – (April 12, 2017)

- Added "Find" command.
- Added "Export/import" command.
- Modified continuous mode to be able to send readings every "n" seconds.
- Default output changed from CSV string of 4 values to just conductivity; Other values must be enabled.

V2.11 – (April 28, 2017)

- Fixed "Sleep" bug, where it would draw excessive current.

V2.12 – (May 9, 2017)

- Fixed bug in sleep mode, where circuit would wake up to a different I<sup>2</sup>C address.

V2.13 – (July 16, 2018)

- Added "RT" command to Temperature compensation.

V2.14 – (Nov 26, 2019)

- The K value range has been extended to 0.01.

# Warranty

Atlas Scientific™ Warranties the EZO™ class Conductivity circuit to be free of defect during the debugging phase of device implementation, or 30 days after receiving the EZO™ class Conductivity circuit (which ever comes first).

## The debugging phase

The debugging phase as defined by Atlas Scientific™ is the time period when the EZO™ class Conductivity circuit is inserted into a bread board, or shield. If the EZO™ class Conductivity circuit is being debugged in a bread board, the bread board must be devoid of other components. If the EZO™ class Conductivity circuit is being connected to a microcontroller, the microcontroller must be running code that has been designed to drive the EZO™ class Conductivity circuit exclusively and output the EZO™ class Conductivity circuit data as a serial string.

**It is important for the embedded systems engineer to keep in mind that the following activities will void the EZO™ class Conductivity circuit warranty:**

- **Soldering any part of the EZO™ class Conductivity circuit.**
- **Running any code, that does not exclusively drive the EZO™ class Conductivity circuit and output its data in a serial string.**
- **Embedding the EZO™ class Conductivity circuit into a custom made device.**
- **Removing any potting compound.**

# Reasoning behind this warranty

Because Atlas Scientific™ does not sell consumer electronics; once the device has been embedded into a custom made system, Atlas Scientific™ cannot possibly warranty the EZO™ class Conductivity circuit, against the thousands of possible variables that may cause the EZO™ class Conductivity circuit to no longer function properly.

## Please keep this in mind:

- 1. All Atlas Scientific™ devices have been designed to be embedded into a custom made system by you, the embedded systems engineer.**
- 2. All Atlas Scientific™ devices have been designed to run indefinitely without failure in the field.**
- 3. All Atlas Scientific™ devices can be soldered into place, however you do so at your own risk.**

Atlas Scientific™ is simply stating that once the device is being used in your application, Atlas Scientific™ can no longer take responsibility for the EZO™ class Conductivity circuits continued operation. This is because that would be equivalent to Atlas Scientific™ taking responsibility over the correct operation of your entire device.